

## Central locking

### Central locking and convenience systems, assembly overview

#### 1 - Coupling station -080-

- ◆ Installation position: Lower A pillar covered by trim in footwell
- Removing A pillar lower trim


⇒ [Repair Manual, Body Interior, Repair Group 70; Pillar and side panel trims; Removing right A pillar lower trim](#)

#### 2 - Door control unit, FR

- ◆ For convenience system only
- ◆ Integrated into window electric motor
- ◆ Removing:
  - Removing door trim

⇒ [Repair Manual, Body Interior, Repair Group 70; Door trims](#)

- Unscrew window electric motor.

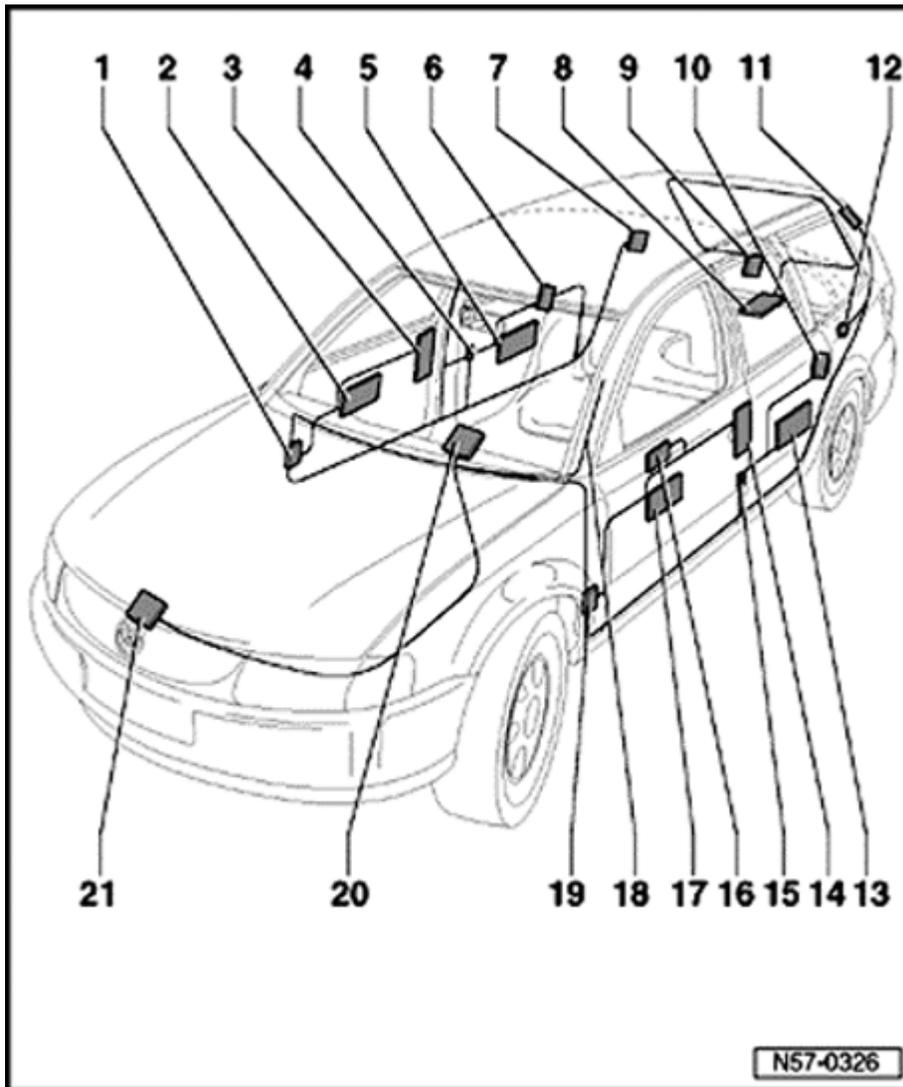

### 3 - Door Lock, FR

- ◆ Door lock is secured to assembly carrier
- ◆ Electric central locking is integrated into door lock module
- ◆ Removing:
  - Removing door trim


⇒ [Repair Manual, Body Interior, Repair Group 70; Door trims](#)

- Remove door lock ⇒ [Page 57-18](#) .

### 4 - Coupling station -080-

- ◆ Installation position: B pillar
- Removing B pillar lower trim

⇒ [Repair Manual, Body Interior, Repair Group 70; Pillars and side panel trims](#)

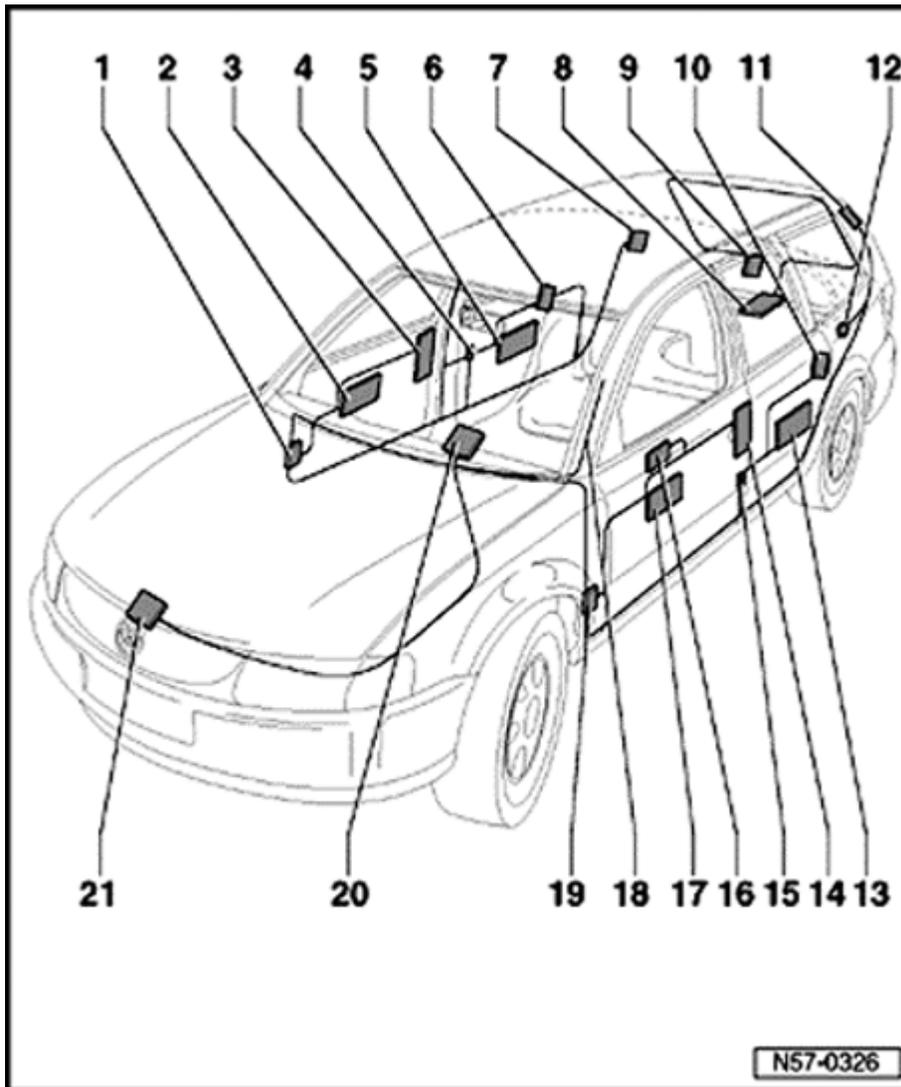

### 5 - Door control unit, RR

- ◆ For convenience system only
- ◆ Integrated into window electric motor
- ◆ Removing:
  - Removing door trim

⇒ [Repair Manual, Body Interior, Repair Group 70: Door trims](#)


- Unscrew window electric motor.

### 6 - Door lock, RR

- ◆ Door lock is secured to assembly carrier
- ◆ Electric central locking is integrated into door lock module
- ◆ Removing:
  - Removing door trim

⇒ [Repair Manual, Body Interior, Repair Group 70: Door trims](#)

- Removing door lock ⇒ [Page 58-13](#) .

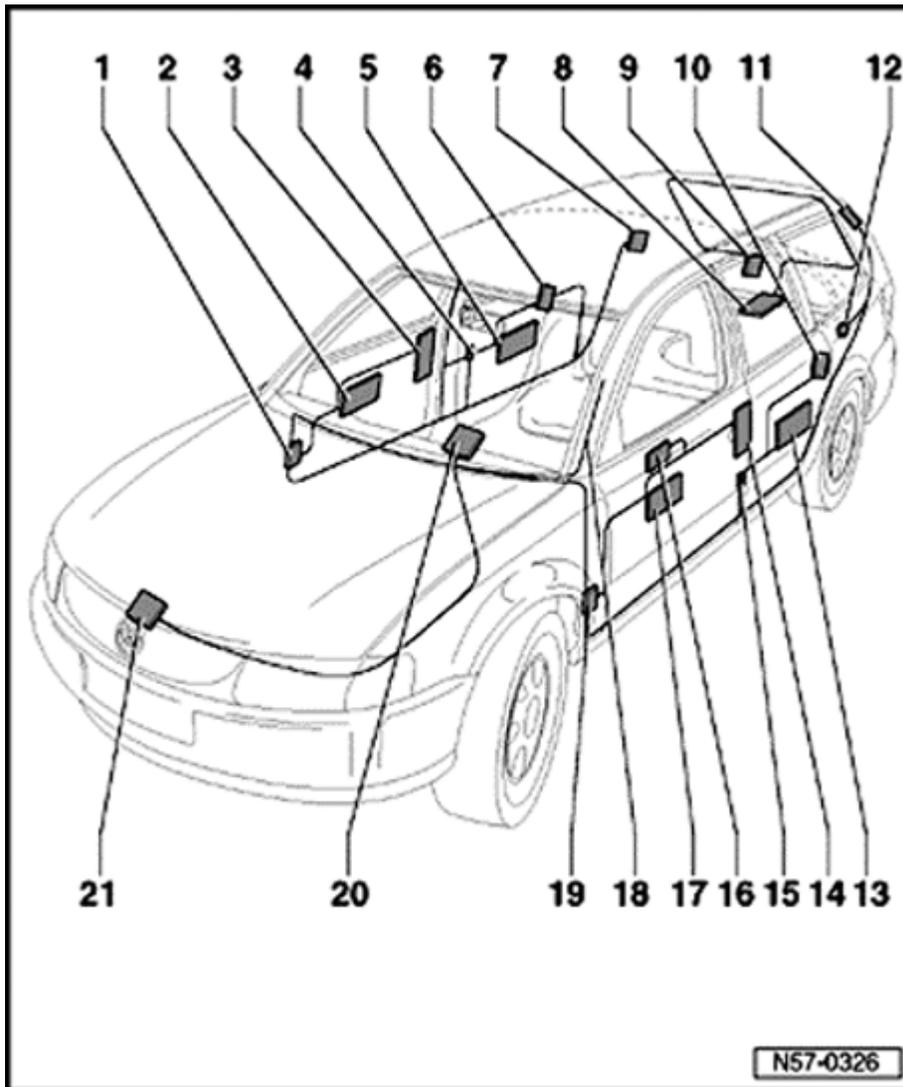

### 7 - Motor for fuel tank lid unlock -V155-

- ◆ Installation position: Under C pillar trim
- ◆ To remove, the trunk trim must be detached first of all up to wheel house

⇒ [Repair Manual, Body Interior, Repair Group 70; Pillars and side panel trims](#)


- ◆ Can be removed with special socket insert T 10010

### 8 - Tailgate lock

- ◆ Bolted to tailgate
- ◆ Removing:
  - Removing tailgate trim

⇒ [Repair Manual, Body Interior, Repair Group 70; Tailgate trim](#)

- Remove tailgate lock.

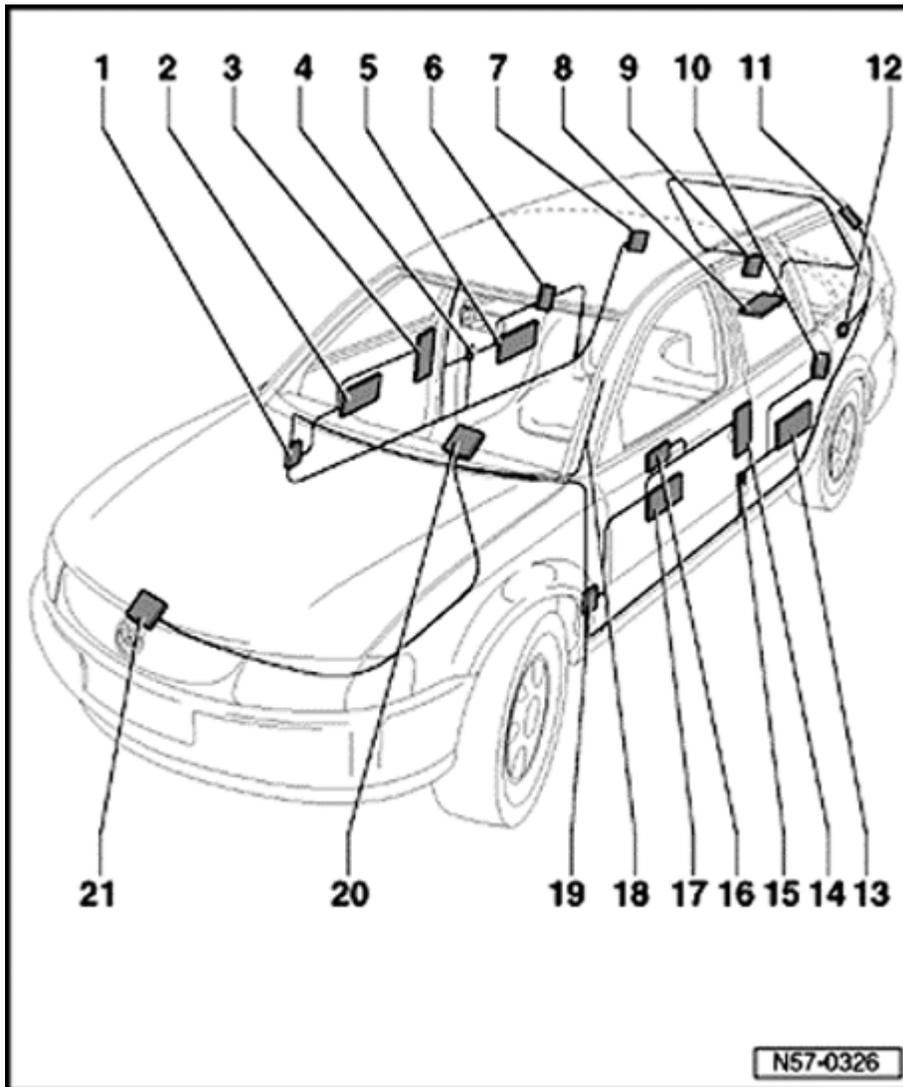

### 9 - Tailgate lock actuator


- ◆ Bolted to tailgate
- ◆ Can be removed with special socket insert T 10010

### 10 - Door lock, RL

- ◆ Door lock is secured to assembly carrier
- ◆ Electric central locking is integrated into door lock module
- ◆ Removing:
  - Removing door trim

⇒ [Repair Manual, Body Interior, Repair Group 70; Door trims](#)

- Removing door lock ⇒ [Page 58-13](#) .

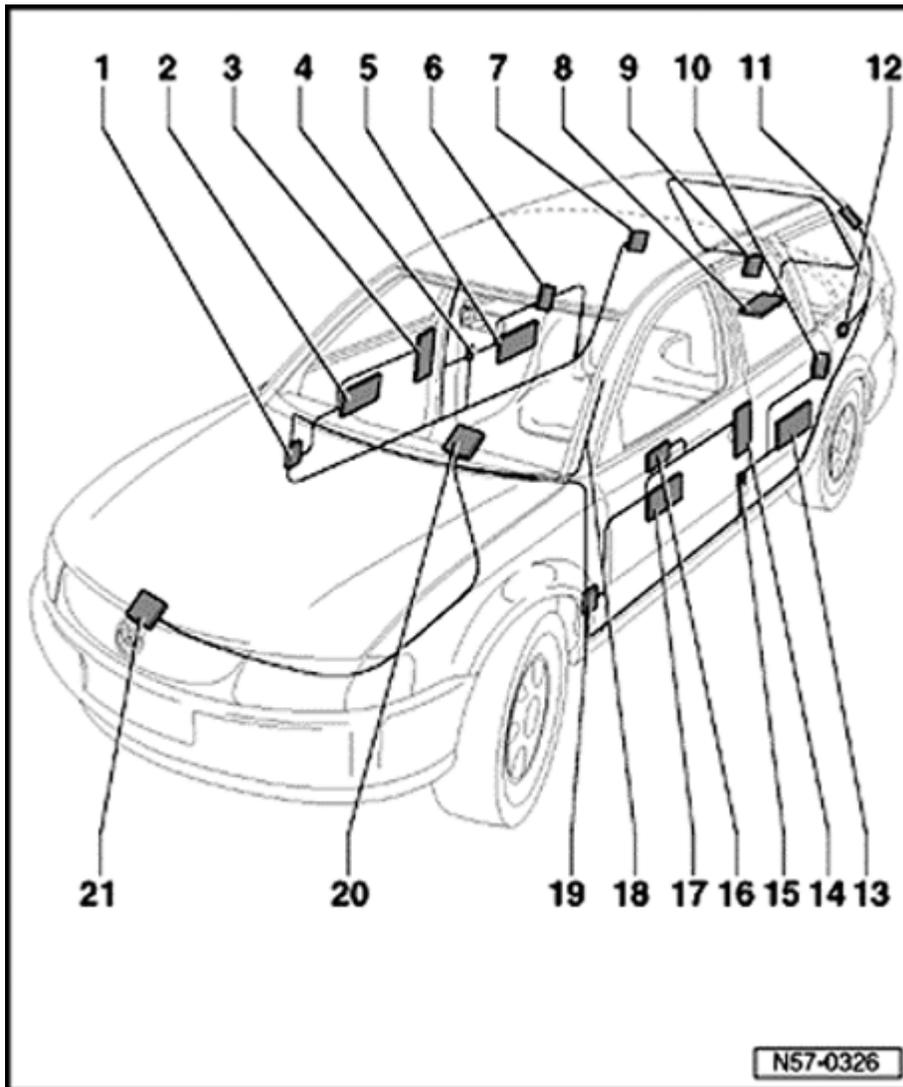

### 11 - Coupling station -080-

- ◆ Installation position: In area of rear roof carrier, covered by roof trim
- Removing roof trim

⇒ [Repair Manual, Body Interior, Repair Group 70; Roof trim; Removing and installing headliner](#)

### 12 - Anti-theft alarm horn


- ◆ Installation position: In area of C pillar covered by C pillar trim

### 13 - Door control unit, RL

- ◆ For convenience system only
- ◆ Integrated into window electric motor
- ◆ Removing:
  - Removing door trim

⇒ [Repair Manual, Body Interior, Repair Group 70; Door trims](#)

- Unscrew window electric motor.

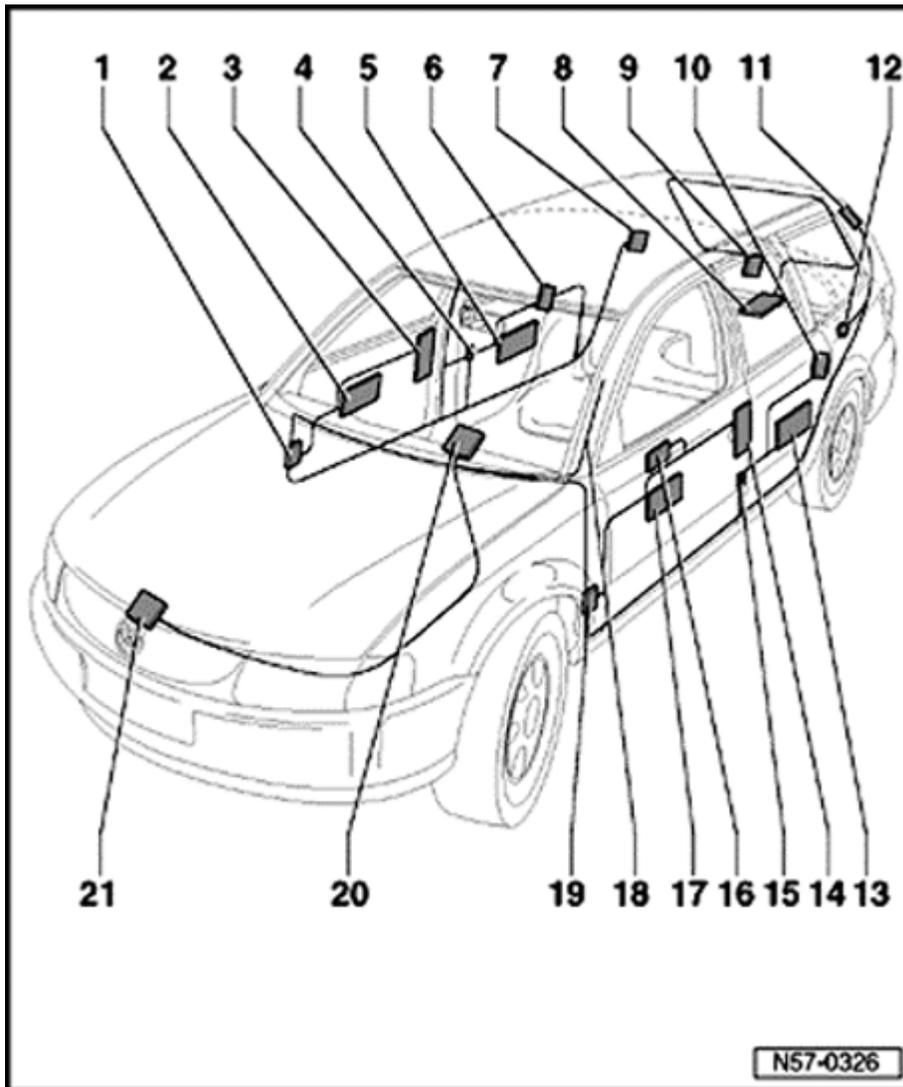

#### 14 - Door lock, FL

- ◆ Door lock is secured to assembly carrier
- ◆ Electric central locking is integrated into door lock module
- ◆ Removing:
  - Removing door trim


⇒ [Repair Manual, Body Interior, Repair Group 70; Door trims](#)

- Remove door lock ⇒ [Page 57-18](#) .

#### 15 - Coupling station -080-

- ◆ Installation position: B pillar
- Removing B pillar lower trim

⇒ [Repair Manual, Body Interior, Repair Group 70; Pillars and side panel trims](#)

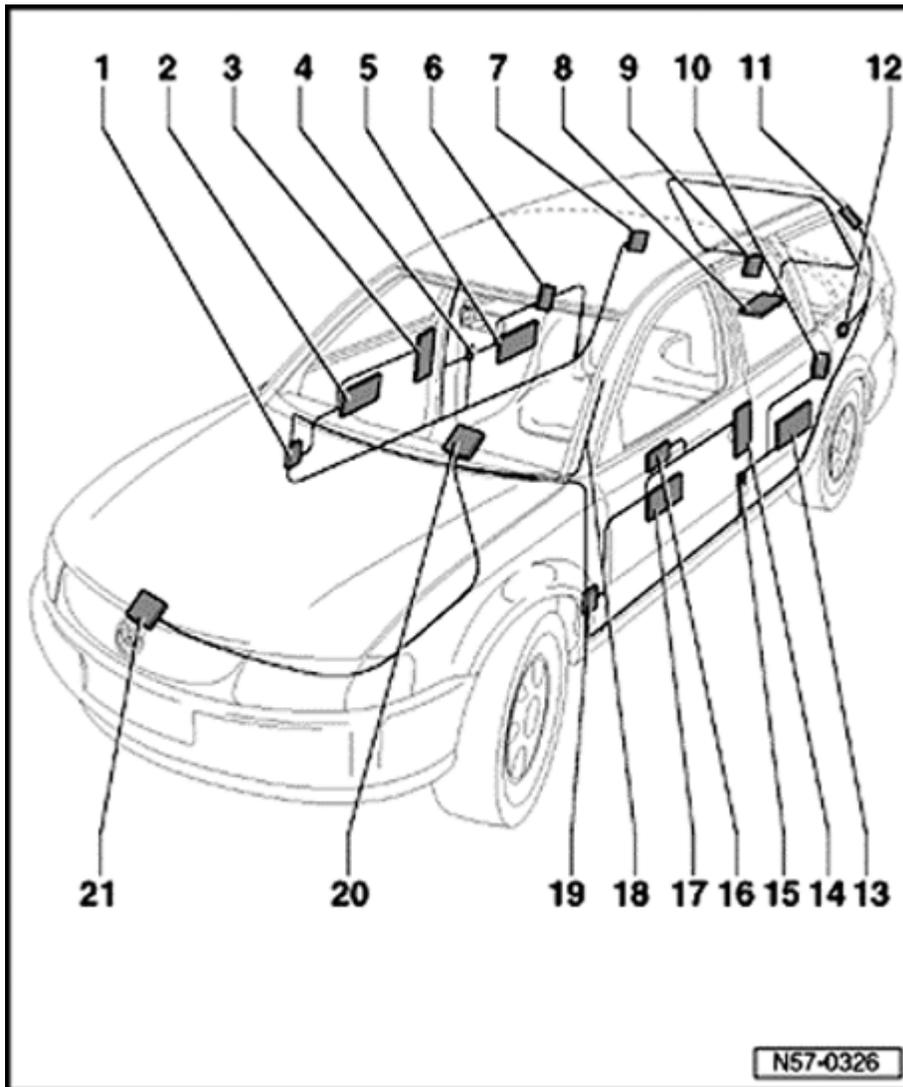

### 16 - Controls

- ◆ Installed in door trim
- ◆ Removing:
  - Removing door trim


⇒ [Repair Manual, Body Interior, Repair Group 70; Door trims](#)

### 17 - Door control unit, FL

- ◆ For convenience system only
- ◆ Integrated into window electric motor
- ◆ Removing:
  - Removing door trim

⇒ [Repair Manual, Body Interior, Repair Group 70; Door trims](#)

- Unscrew window electric motor.

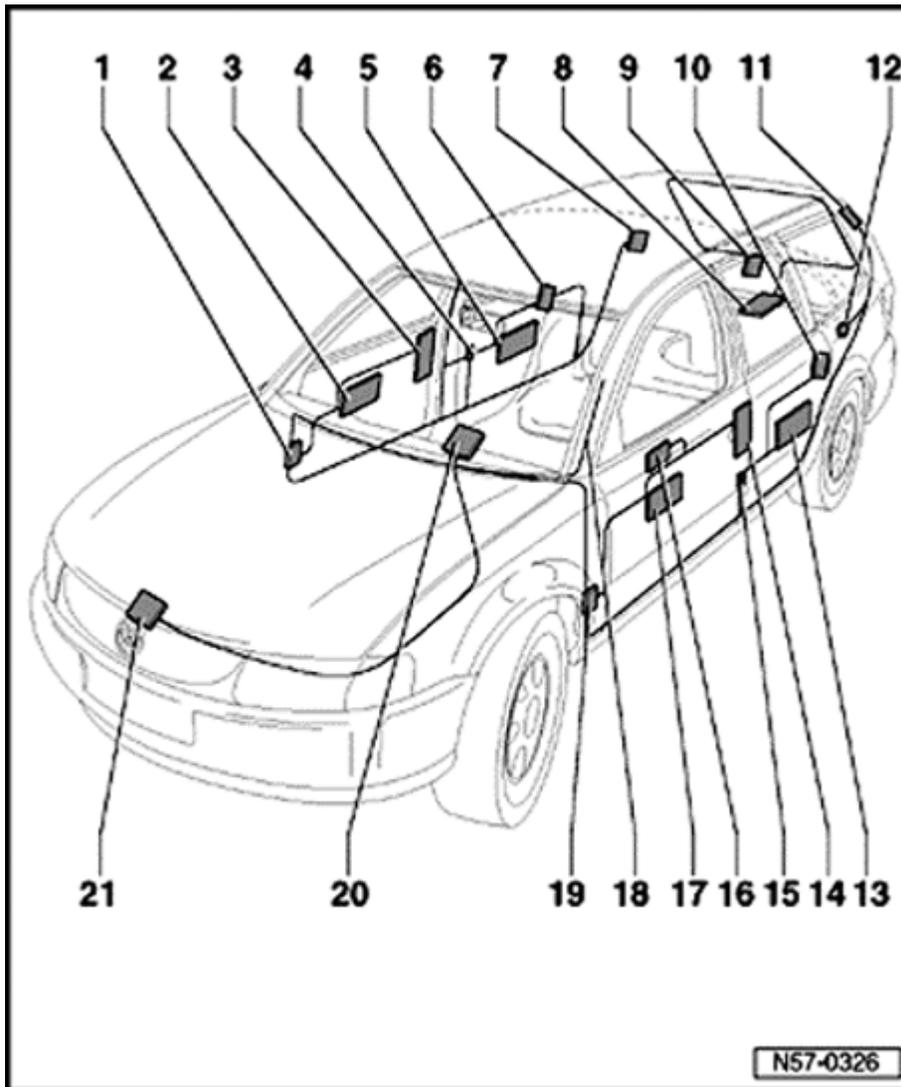

### 18 - Aerial for radio remote control


- ◆ Under left A pillar trim
- ◆ Removing:
  - Removing A pillar trim

⇒ [Repair Manual, Body Interior, Repair Group 70; Pillars and side panel trims](#)

### 19 - Coupling station -080-

- ◆ Installation position: Lower A pillar, covered by trim in footwell
- Removing left A pillar lower trim

⇒ [Repair Manual, Body Interior, Repair Group 70; Pillar and side panel trims; Removing right A pillar lower trim](#)

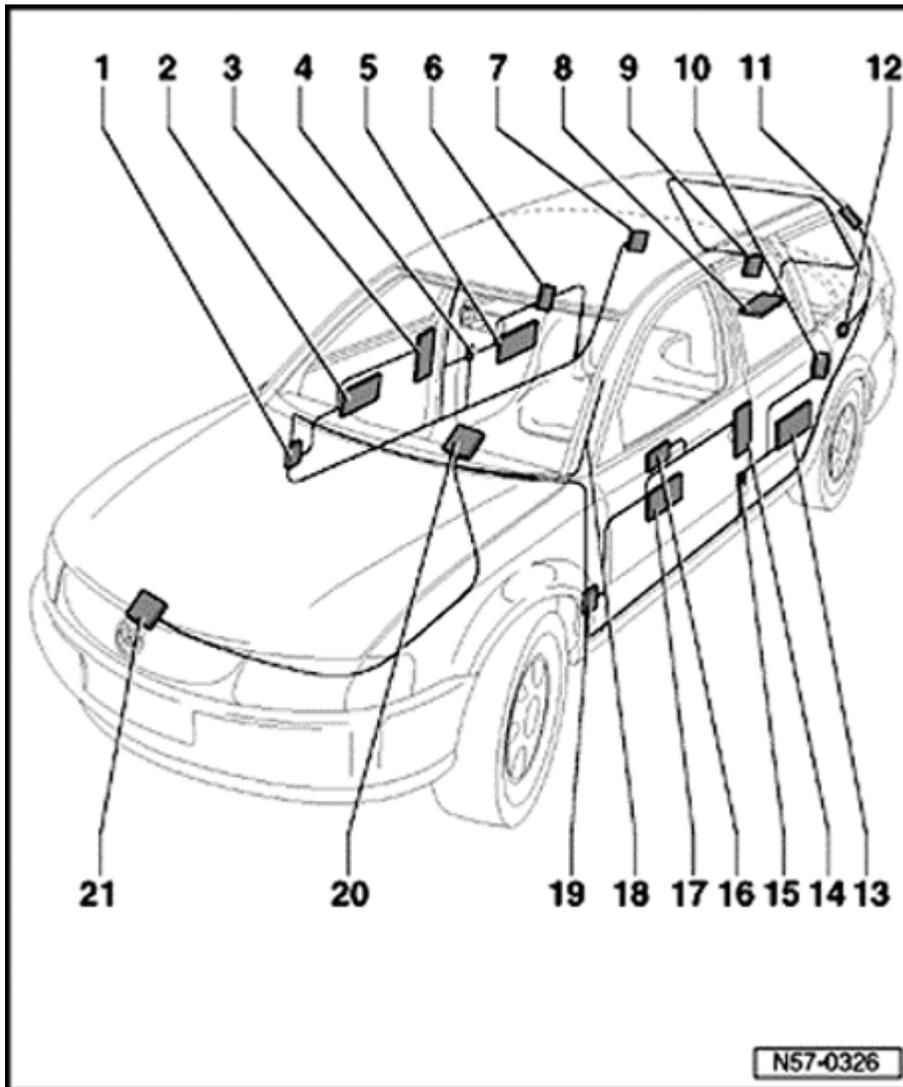

### 20 - Central module

- ◆ Bolted to bracket on steering column under dash panel
- ◆ To remove, remove lower steering column trim first
- ◆ Comfort system control module under carpet left front floor

⇒ [Repair Manual, Body Interior, Repair Group 68; Compartments, covers and trims; Removing trim under steering column](#)

### 21 - Trunk lock

- ◆ Contact switch for ATA
- ◆ Installation position: In lock carrier
  - Removing trunk lock ⇒ [Page 55-20](#)