THE TRISTAR® SERIES

TRISTAR® RGB LED Lamp Remote Controller IR-1627-S



Dimensions: 95 (L) x 50 (W) x 5 (D) mm

ColorStars Group

Taiwan Operations: Color Stars, Inc.

10F, No. 566 Jung Jeng Rd. Sindian City Taipei County 231, Taiwan, R.O.C.

Tel: +886-2-8667-6600 Fax: +886-2-8667-1400 Email: sales@colorstars.com Website: www.colorstars.com

Headquarters: ColorStars Group

300 Center Ave., Suite 202 Bay City, MI 48708 USA Tel: 989-509-5924 Fax: 989-509-5924

Email: sales@colorstars.com Website: www.colorstars.com

Using a Line Switch to Change the Color or Color-Changing Mode of TriStar® RGB Lamps

Setting the Memory Color and Changing the Mode

Setting the Memory Color

On	
} Off	20 sec
OII	8 sec

- 1. Turn the power switch on.
- 2. Leave the power on for over 20 seconds.
- 3. When the power is turned off for more than 8 seconds, the Mode (color or color-changing mode) of the lamp(s) that was on for over 20 seconds will be stored in the Memory.
- 4. The next time the power switch is turned on, the Mode of the lamp(s) will be the Mode stored in the Memory.

Changing the Mode

Off	
≀	
On	

- 1. Turn the power switch off.
- 2. Turn the power switch on within 3 seconds.
- 3. The Mode will be set to Flash (State 2).
- 4. If the power switch is turned on and off again within 3 seconds, the Mode will be Strobe (State 3). Each time the power switch is turned on and off within 3 seconds, the Mode will change to the next state according to the chart on the right.

Resetting when Lamps are Out of Synch

Off	
}	3 sec
On	

- 1. Turn the power switch off.
- 2. Turn the power switch on within 3 seconds.
- 3. The lamps will be synchronized and the Mode will be set to Flash (State 2).
- Turning the power switch on and off within 3 seconds will change the mode as described above.

1 1/00
Mode
Memory
Flash
Strobe
Fade
Smooth
R
G
В