


2. Alignment and Adjustment

2-1 Reference

- 1) X-Point (Tracking center) adjustment, "Head switching adjustment" and "NVRAM option setting" can be adjusted with remote control.
- 2) When replacing the Micom (IC601) and NVRAM (IC605 ; EEPROM) be sure to adjust the "Head switching adjustment" and "NVRAM option setting".
- 3) When replacing the cylinder ass'y, be sure to adjust the "X-Point" and "Head switching adjustment".
- 4) Among Samsung VCR remote control used for adjustment as a accessory, only the remote control that has figures buttons (0 ~ 9) is available for all adjustment regardless of chassis.
- 5) How to adjustment.
 - Press the "SW718" button on Main PCB to set the adjustment mode.
 - If the corresponding adjustment button is pressed, the adjustment is performed automatically.
 - If the adjustment is completed, be sure to turn the power off.

2-1-1 Location of adjustment button of remote control

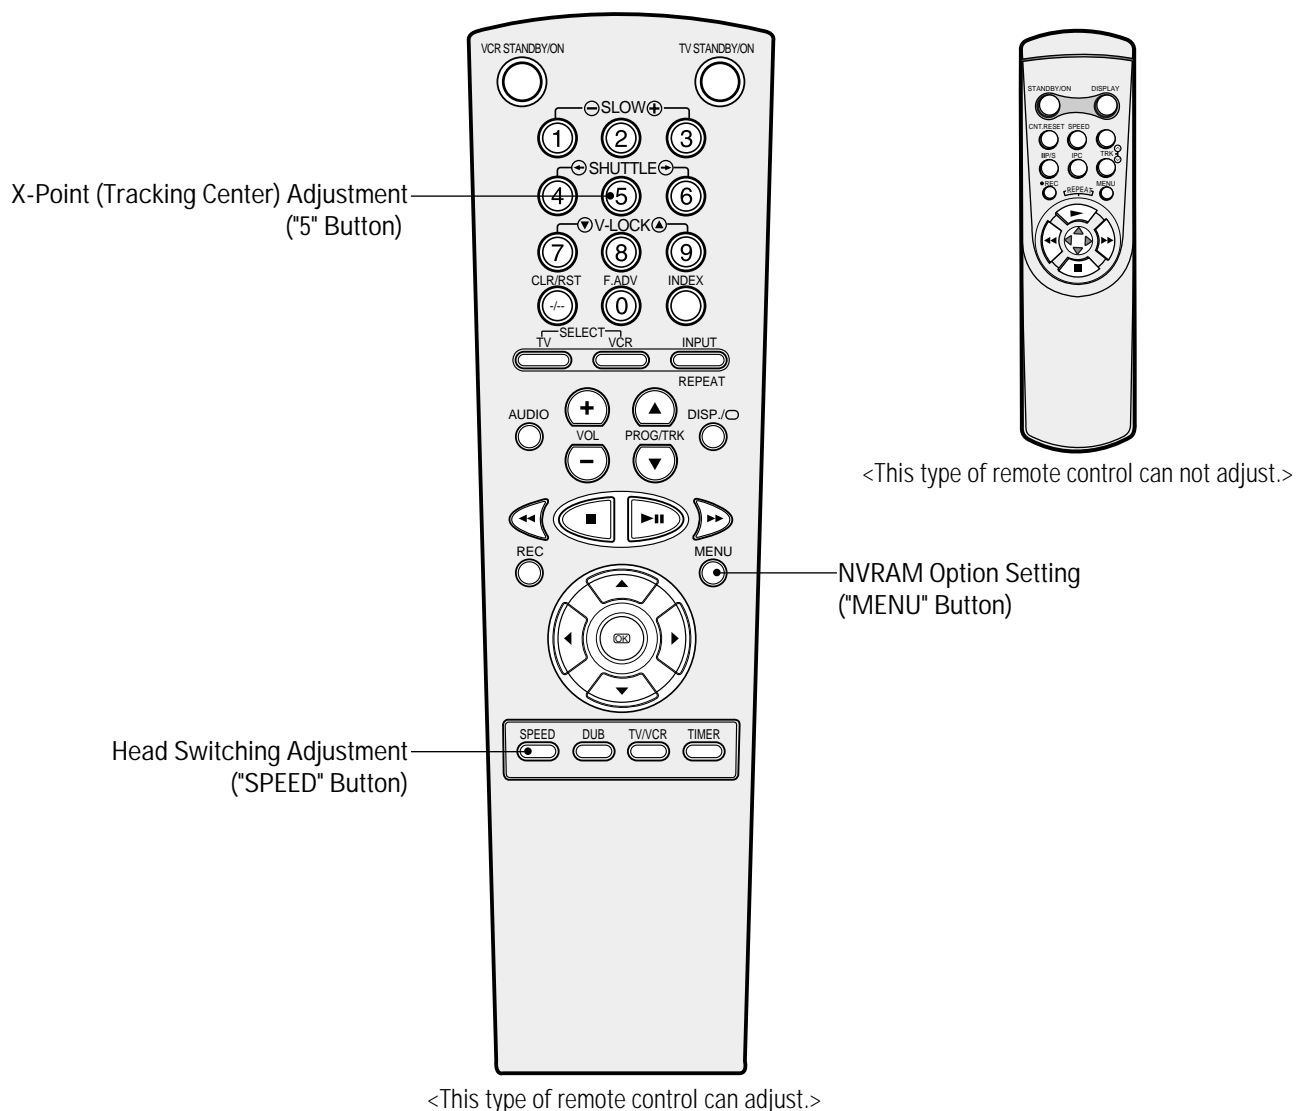

Remote Control for adjustment is not supplied as a Service Jig.

Fig. 2-1

2-1-2 SW718 (TEST) location for adjustment mode setting

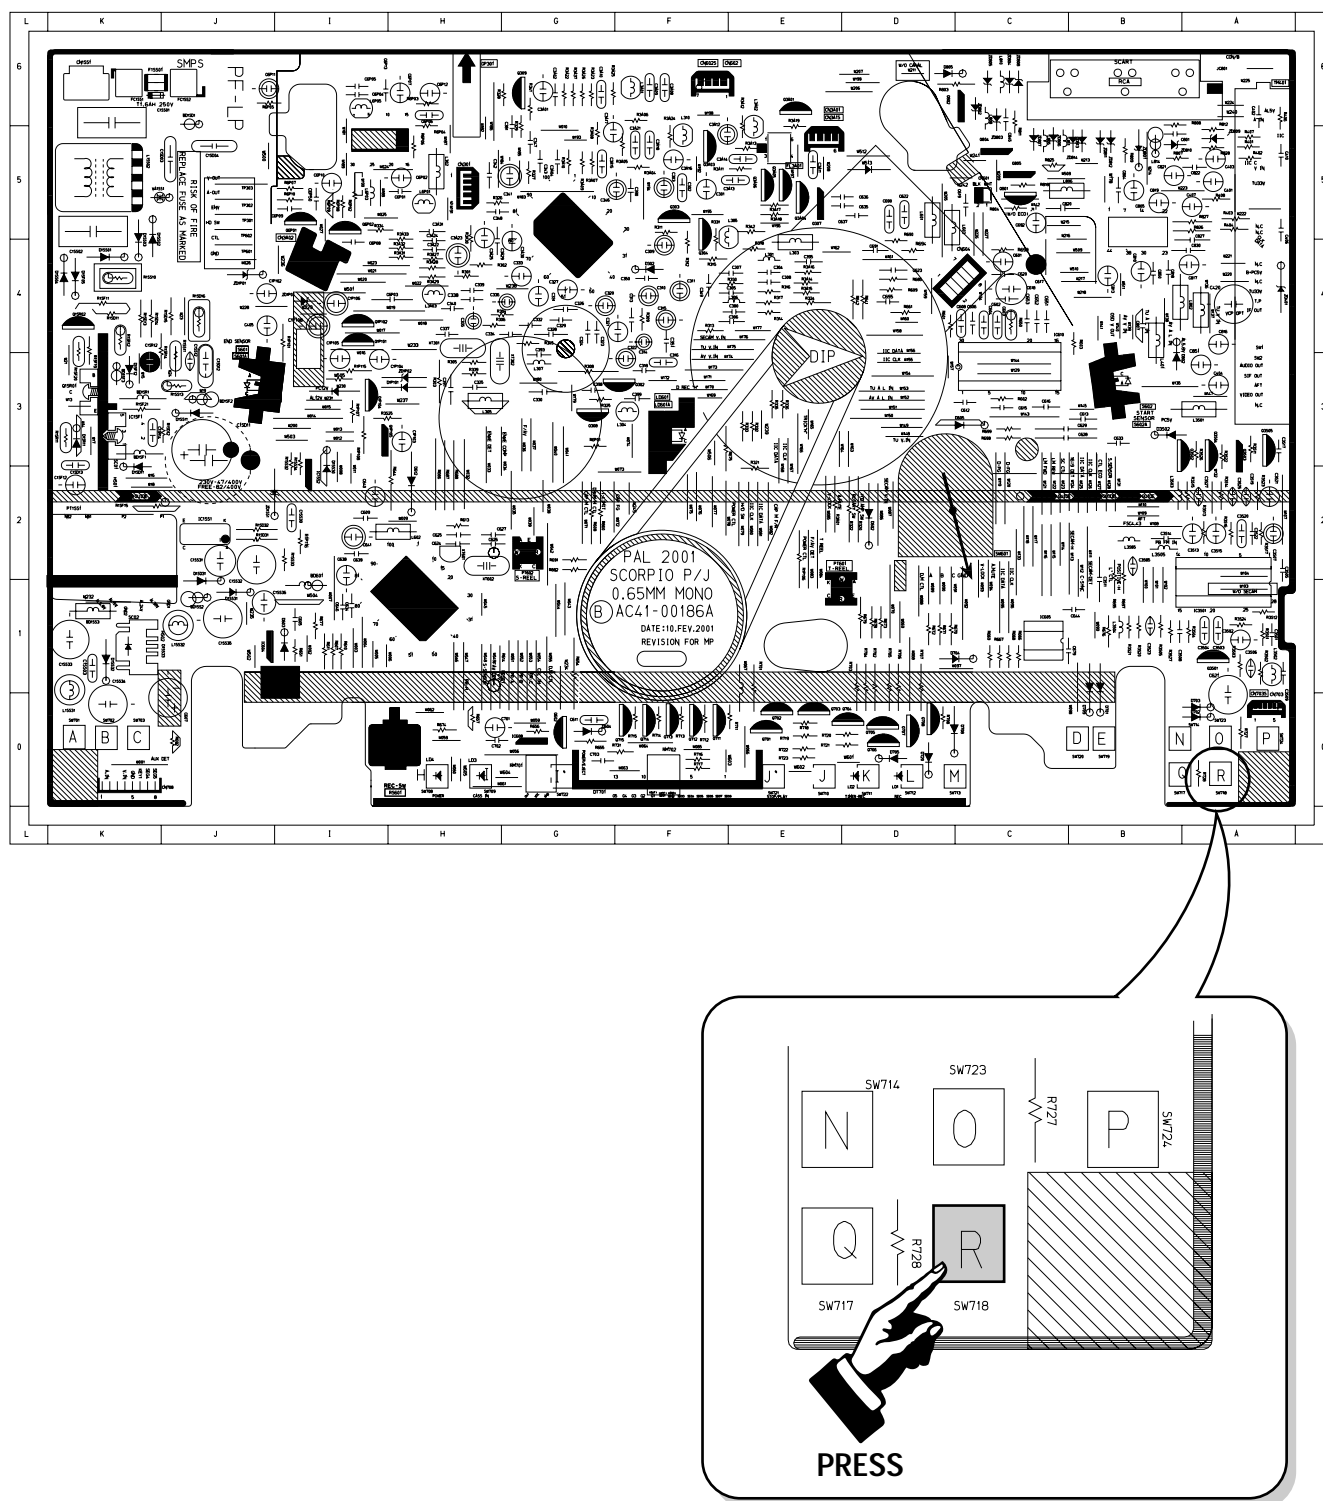


Fig. 2-2 Main PCB (Top View)

2-2 Mechanical Adjustment

Note : Refer to the Mechanical Manual “TS-10 (AC68-01405A)” for the adjustment and confirmation of ass’y full deck.

2-2-1 The number and position of test point

Test point :	TP601 (Control pulse)	TP301 (Envelope)
	TP602 (H'D S/W -Trigger)	TP302 (Audio output)
		TP303 (Video output)

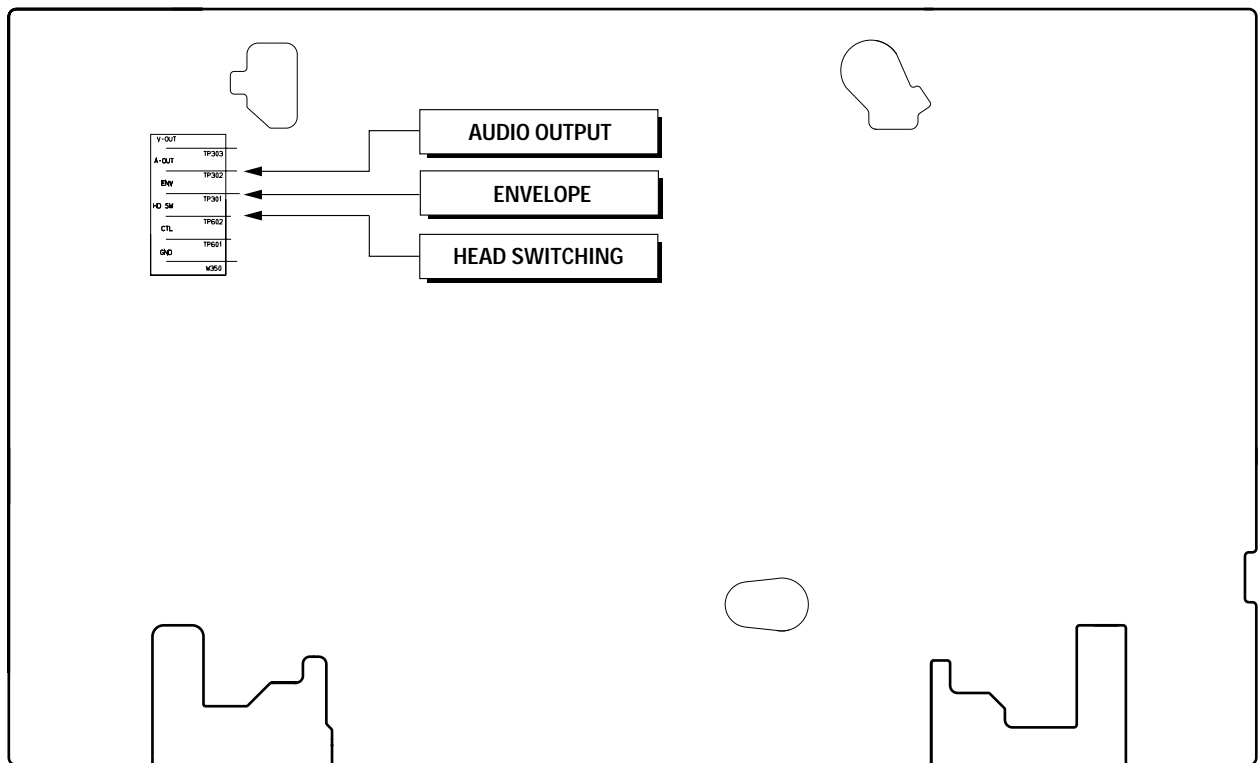


Fig. 2-3 Location of Test point (Main PCB-Top View)

2-2-2 ACE Head Position (X-Point) Adjustment (See the 2-2-1(d) ACE Head Position (X-Point) Adjustment on page 2-2 of the Mechanical Manual)

- 1) Playback the alignment tape (Color bar).
- 2) Press the “SW718” button on Main PCB to set the adjustment mode. (See Fig. 2-2)
- 3) Press the “5” button of remote control then adjustment is operated automatically. (See Fig. 2-1)
- 4) Connect the CH-1 probe to TP301 (Envelope) the CH-2 probe to TP602 (H'D switching pulse) and then trigger to CH-1.
- 5) Insert the (-) driver into the X-Point adjustment hole and adjust it so that envelope waveform is maximum.
- 6) Turn the Power off.

2-3 Head Switching Point Adjustment

- 1) Playback the alignment tape.
- 2) Press the "SW718" button on Main PCB to set the adjustment mode. (See Fig. 2-2)
- 3) Press the "SPEED" button of remote control then adjustment is operated automatically. (See Fig. 2-1)
- 4) Turn the Power off.

2-4 NVRAM Option Setting

- 1) NVRAM Option is adjusted at production line basically.
- 2) In case Micom (IC601) and NVRAM (IC605 ; EEPROM) is replaced, be sure to set the corresponding option number of the repaired model. (If the option is not set, the unit is not operated.)

- 1) Press the "SW718" button on Main PCB to set the adjustment mode. (See Fig. 2-2)
- 2) Press the "MENU" button on the remote control about 5 seconds then option setting display is appeared. (See Fig. 2-4)
- 3) Select the option number (See Table 2-1) of corresponding model with "CURSOR" button on the remote control.
- 4) If selecting the option number is completed, press the "OK" button of remote control.
(If "OK" button is pressed, the selected number is changes reversed color. ; See Fig. 2-4)
- 5) Press the "MENU" button of remote control again to store the option number.
(“PLEASE WAIT” is displayed for a second as shown Fig. 2-5 and this setting is completed.)
- 6) Turn the Power off.

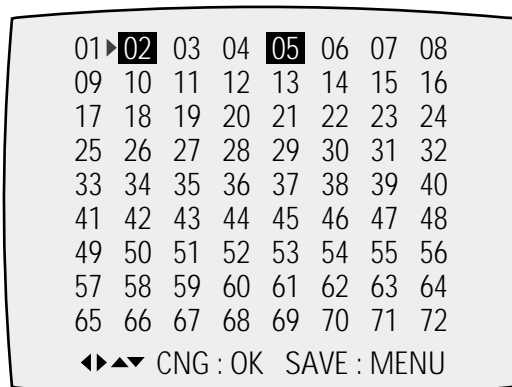


Fig. 2-4

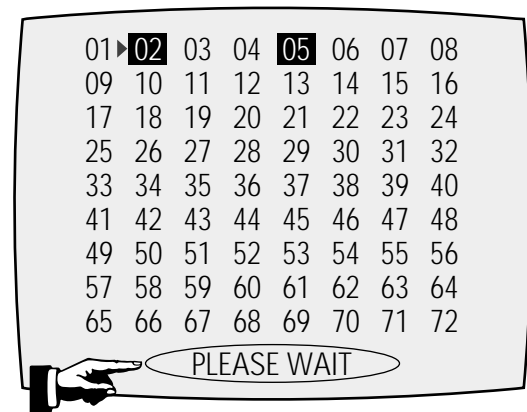


Fig. 2-5

<Table 2-1 NVRAM Option Number>

MODELS	OPTION NUMBER
SVR-443	9, 10, 15, 20, 24, 30, 32, 34, 36, 38, 42, 44, 47, 54, 57, 60, 61, 63
SVR-440	9, 10, 20, 30, 32, 34, 36, 38, 42, 44, 47, 52, 54, 57, 60, 61, 63
SVR-243	10, 15, 20, 24, 30, 32, 34, 36, 37, 42, 44, 47, 54, 57, 60, 61, 63, 71
SVR-240B	10, 20, 30, 32, 34, 36, 37, 42, 44, 47, 52, 54, 57, 60, 61, 63, 71
SVR-240W	10, 20, 30, 32, 34, 36, 37, 42, 44, 47, 52, 54, 57, 60, 61, 63, 71
SVR-2401	10, 20, 30, 34, 36, 37, 42, 44, 47, 52, 54, 57, 60, 61, 63, 71
SVR-141	10, 20, 24, 35, 37, 42, 44, 51, 54, 57, 60, 61, 63, 71
SVR-140	10, 20, 24, 35, 37, 42, 44, 51, 52, 54, 57, 60, 61, 63, 71
VCP-007LR	10, 20, 22, 35, 37, 42, 44, 51, 57, 60, 61, 71