



DELTA 1010

Digitaler Anrufbeantworter

BEDIENUNGSANLEITUNG

INSTRUCTION MANUAL

TABLE OF CONTENTS

TABLE OF CONTENTS	
Table of contents	1-2
INTRODUCTION	
Dear customer	3
Warning	3
Scope of supply	4
Safety notes	4
THE UNIT	
Description of the unit	5-6
INSTALLATION	
Battery installation	7
Installing the unit	8
Connect the line cord	8
Connect the telephone	8
Connect the power cord	8
BEFORE STARTING	
Setup ring select	9
Date/time/stamp setting	9
Play the current time	10
Recording your announcement	10
Reviewing your announcement	10
Changing your announcement	11
OPERATION	
Recording a memo	12
Two way recording	12
Answer mode	13
Turning the system on/off	13
Answer calls	14
Bypassing the announcement	14
Screening your calls	14
Listening to your messages	15
Erase or save message	16
Call Break Through (CBT)	16-17
Change the CBT code	17

TABLE OF CONTENTS

REMOTE CONTROL	
Your remote access code	18
Change the remote access code	19
Change your remote access code remotely	19
Room monitor	20
Changing your announcement	20
Recording the announcement 2 (OGM2)	21
Playing your message	22-23
Recording a memo	23
Turning on the system	23
Turning off the system	24
REFERENCE	
When memory is full	25
Malfunction	25
Replacing the battery	25
Table 1: Message window	26
Table 2: Remote control command	26-27
TECHNICAL SPECIFICATIONS	28

INTRODUCTION

DEAR CUSTOMER, we congratulate to your new digital telephone answering machine and we are glad that you have decided for the DELTA 1010 from 4MBO International Electronic AG. The product you have bought is state of the art, of highest quality and has many advanced features.

WARNING



Please read the operation manual in order to familiarise yourself with all the possibilities of your telephone answering machine. Follow the instructions in order to ensure reliable operation and a long service life of the appliance. For messages lost as a result of a technical defect 4MBO cannot accept any liability.

The operating instructions are there to provide information. Their contents are not the subject of a contract. All of the data stated are merely nominal values.

Subject to technical modifications.

Closing date: 10/2001

INTRODUCTION

SCOPE OF SUPPLY

Please check your appliance to ensure that it is complete. The following parts should be present:

- 1 answerphone with telephone connecting cord
- 1 plug-on power supply unit (IN: 220-240 V alternating current 50 Hz OUT: AC 9 V 300 mA)
- 1 instruction manual

SAFETY NOTES



In order to ensure trouble-free operation and a long service life of the appliance the following safety notes are to be exactly observed:

- Use only the plug-in power supply and alkaline 9 V block batteries.
- Do not expose the appliance to vibrations and shocks, moisture and direct sunlight.
- Do not expose the appliance to any extreme temperature fluctuations.
- Do not set up the appliance in the immediate vicinity of electromagnetic interference fields. Examples: lifts, radios and TV sets, photocopiers, heating and air conditioning units.
- Do not connect the appliance to the same electric terminal connections to which appliance with an irregular current flow are connected (air-conditioning units, photocopiers etc.).
- Do not press the keys too hard. Even with only light key pressure the appliance works correctly.
- Clean the answerphone always only with a slightly dampened cloth. Do not use any solvents.
- Do not spill any liquids over the appliance.

THE UNIT

DESCRIPTION OF THE UNIT

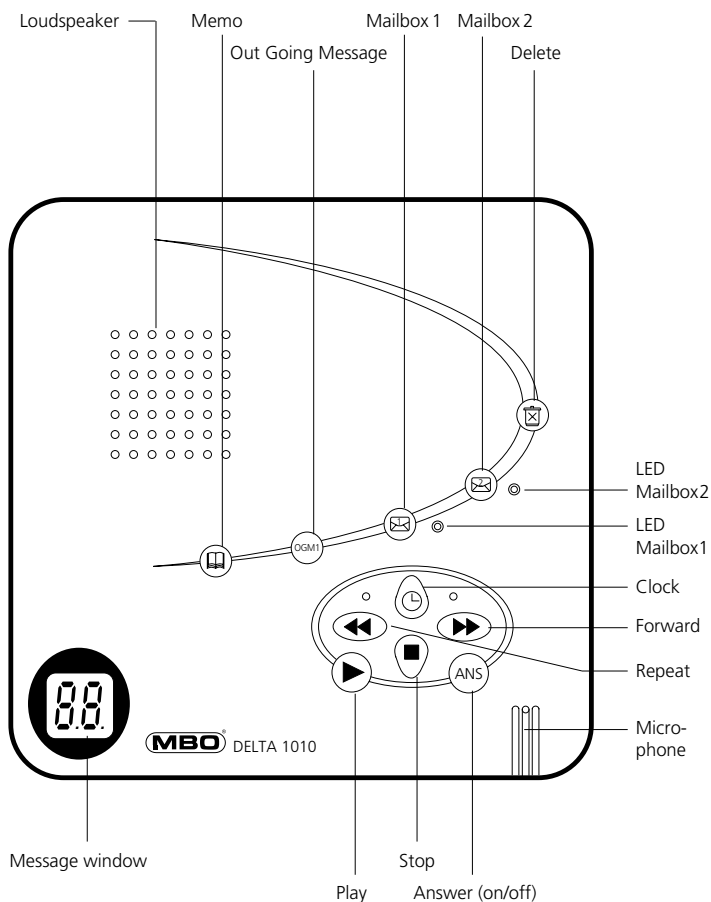


Fig. 1 Top view

THE UNIT

DESCRIPTION OF THE UNIT

Fig. 2 Rear side


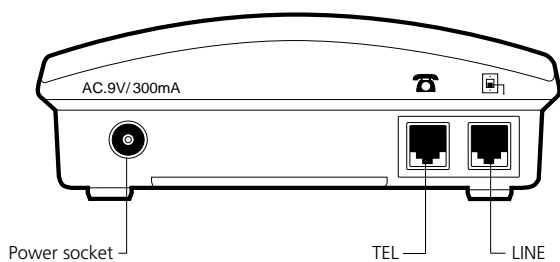


Fig. 3 Right side

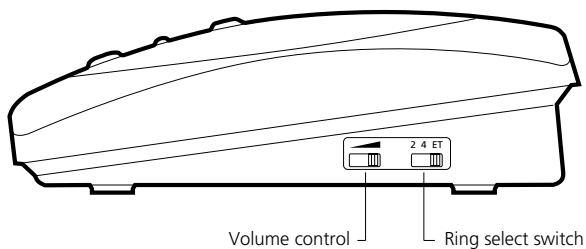

INSTALLATION


BATTERY INSTALLATION

Open the battery door on the base of the unit and install one 9 V battery. The battery is used to save your messages in the event of a power failure. Your announcements and messages will be retained in memory for at least 50 hours during a power failure. If the battery used for backup power is missing, low on power, or incorrectly installed, the Message window displays "Lo".




Notes:

To avoid losing your announcements or messages stored in memory, you should leave the unit connected to the AC power while changing the battery. Disconnect the telephone line cord before changing the battery.

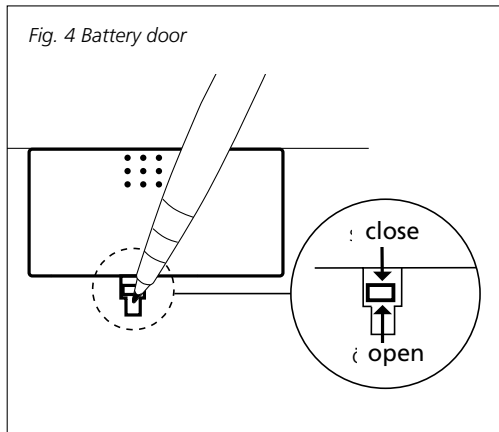

Batteries are hazardous waste. Do not dispose them together with the household garbage.

INSTALLATION

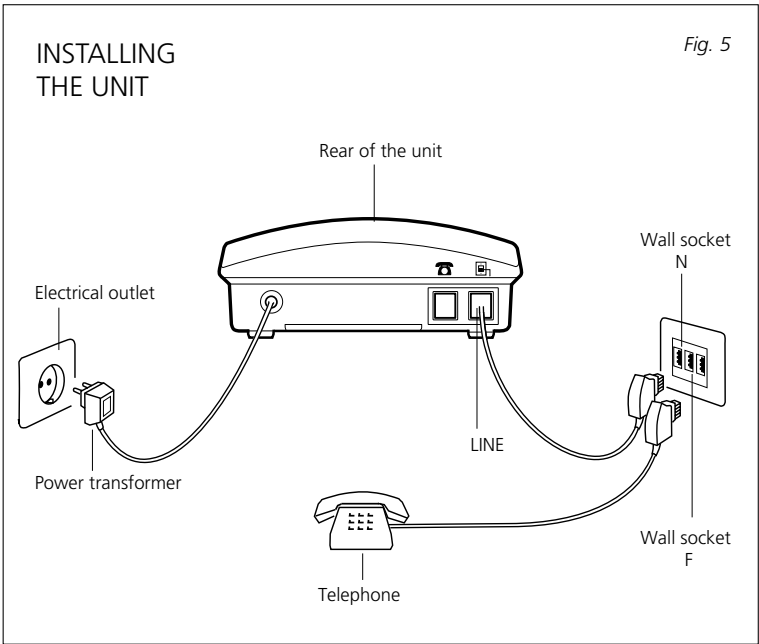

CONNECT THE LINE CORD

Plug one end of the line cord into the LINE socket at the rear of the unit and the other end into the modular wall socket (N).

CONNECT THE TELEPHONE

Plug your telephone set cord into the wall socket.

CONNECT THE POWER CORD

Plug the power transformer into an electrical outlet that is not controlled by a wall switch. The message window will count from **0** to **41**. It will then flash **CL / 0** to indicate that you need to set the date, time. The **ANS** LED will turn on to indicate the unit is ready to receive an incoming message (ICM).

BEFORE STARTING

SETUP RING SELECT

Use the switch on the right side of the unit to select the number of times you want the phone to ring before the system answers.

1. Set it to 2 if you want the system to answer all calls on the second ring
2. Set it to 4 if you want the system to answer calls on the fourth ring
3. Set it to ET (Economical Toll saver) if you want the system to answer on the second ring when the system has new messages and on the fourth ring when the system has no new message.

Note:

We suggest that you use ET. If you call long distance or from a pay phone to check your messages, the system will answer after 2 rings if a new message has been received since the last time you checked. If the system does not answer after 2 rings you have no new messages so you can hang up to avoid paying for the call.

DATE/TIME STAMP SETTING

NOTE: 2 for Monday, 3 for Tuesday, 4 for Wednesday, 5 for Thursday, 6 for Friday, 7 for Saturday, 1 for Sunday.

When "CL" flashes on the message window the system clock need to be set as follows:

1. Press and hold down the [CLOCK ⌚] key for about 2 seconds and release to play voice weekday.
2. Press the [FORWARD ►►] or the [REPEAT ◀◀] key to select the right weekday.
3. Press the [CLOCK ⌚] key to select the correct weekday.
4. Repeat step 2-3 to setup hour.
5. Repeat step 2-3 to setup minute.

After the minute has been setup the exact Day Time Stamp (DTS) will be played.

BEFORE STARTING

Adjust the volume control if necessary. The setup procedure will be abandoned if no key is pressed within 8 seconds.

PLAY THE CURRENT TIME

Whenever you want to hear the current week-day and time, press [**CLOCK** ☉] key once.

RECORDING YOUR ANNOUNCEMENT

Before using your new answering phone, you should record an Out Going Message (OGM) that callers will hear when the system answers a call.

To record OGM:

1. Prepare your Out Going Message (OGM)

Example:

"Hello, we can't come to the phone right now. Please leave your name, telephone number and a short message after the beep. Thank you."

2. Press and hold the [**OGM1**] key for about 2 seconds and then release it to record OGM after hearing the beep. The message window will count from "0".
3. Speak towards the microphone in a normal tone of voice, from about 25 cm away.
4. Press [■] key when you have finished, or the unit stops automatically after 50 seconds.
5. The unit will automatically play back your announcement.

Please note:

If you have not recorded an OGM, the default OGM 1 will be played.

REVIEWING YOUR ANNOUNCEMENT

To review your announcements press [**OGM1**] key once.

BEFORE STARTING



CHANGING YOUR ANNOUNCEMENT

The old announcement is deleted when a new announcement is recorded successfully. The default OGM will be used if the Recording OGM is shorter than 5 seconds.

OPERATION

RECORDING A MEMO IN A MAILBOX


Memo is a message left for a family member. It is stored by the system as an incoming message.




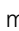 
1. Press and hold the [**MEMO** ] key for about 2 sec. A short beep will sound, the message window will blink "oo" and the mailbox LEDs will also blink . Release the [**MEMO** ] key.
2. Then select a desired mailbox key. Memo will start recording after a long beep. The maximum memo recording time is 120 sec.

Note:

Press [**PLAY** ] key to select mailbox 0.



Press [**MAILBOX 1** ] key to select mailbox 1.

Press [**MAILBOX 2** ] key to select mailbox 2.

3. To stop recording by press the [**STOP** ] key.
4. To listen to the memo press the [**PLAY** ] key for mailbox 0,  for mailbox 1,  for mailbox 2.

TWO WAY RECORDING

If you have an important telephone conversation but you do not want to write it down, you can record it as follows:

1. Press and hold the [**MEMO** ] key for about 4 seconds at any time during the phone conversation, until window shows "2A".
2. The mailbox's LED will flash, press the desired mailbox, and the conversation will be recorded.
3. To stop recording press the [**STOP** ] key.

The two way recording is stored by the system as an incoming message in mailbox.

Please note: The system does not sound a warning beep to let the other party know that the call is being recorded. To ensure that you are in compliance with the regulations that concern recording a telephone call, you should start the recording process and then inform the caller that you are recording the call.

OPERATION

ANSWER MODE

The system has two operation modes: "ANSWER & RECORD" mode and "ANSWER ONLY" mode.

ANSWER & RECORD:

The system will answer and record incoming calls. In "ANSWER & RECORD" mode the OGM will be played to inform caller to leave message.

The procedure to setup the "ANSWER & RECORD" mode is as follows:

1. The system is set to "ANSWER & RECORD" mode once the power is switched on.
2. While in "ANSWER ONLY" mode, press the [**ANS**] key for about 2 seconds. A beep tone will be heard and (default) OGM will be played. The message window shows "**A1**".
3. The message window will display the total number of messages.

ANSWER ONLY:

The system will only play (OGM2) "Memory full, please call it later again" to inform the caller you cannot come to the phone. No message will be recorded. When the memory is full, the system will change to "ANSWER ONLY" automatically.

TURNING THE SYSTEM ON / OFF

After you have completed the setup, the message window will show the number of messages stored in the memory (**0** if no message has been received), the unit will turn on automatically.

The answer button will light up to inform you that the answer system is on. If you do not want your system to answer calls, press the [**ANS**] key once to turn off the system.

Press [**ANS**] key once more time will turn on the unit again.

OPERATION

ANSWER CALLS

When the system answers a call in "ANSWER & RECORD" mode, the caller hears the OGM announcement followed by a beep.

While the system is answering a call, the message window displays "--". The answer key will flash if a new message exists.

For "ANSWER ONLY" mode, the system will only play a default message (OGM2) and no message will be recorded.

To conserve memory, messages are limited to a maximum of 120 seconds each. The system will beep once and hang up if:

1. The caller is still speaking after 120 seconds
2. The caller is silent for more than 8 seconds
3. The system memory runs out
4. A continuous signal or busy tone is detected

BYPASSING THE ANNOUNCEMENT

People who call frequently can press "*" for 1 second (from a touch tone telephone) when the announcement begins. The system will skip the rest of the announcement, then beep, and begin recording.

SCREENING YOUR CALLS

To screen your calls, set the system to "ANSWER & RECORD" and adjust the volume control so you can hear the announcement and callers message on the system's speaker. If you decide to take a call, lift the handset of any telephone on the same line. The system will stop recording and reset to "ANSWER & RECORD".

NOTE:

If the announcement does not stop immediately, press the [STOP ■] key.

OPERATION

LISTENING TO YOUR MESSAGES

You can use the speaker volume control to adjust the volume. It does not effect the level of the announcement heard by the caller.

1. Playback all messages:

Press the [PLAY ►] key to hear all messages sequentially.

2. Playback new messages only:

Press and hold the [PLAY ►] key for about 2 seconds, new messages will be played sequentially.

While the system plays each message, it will show the order on the message window and announces it on speaker. At the end of each message, the system announces the day and time the message was received. After the last message has been played, the system announces "END OF MESSAGES".

The following functions are available during playback to make it easier on you to listen to the messages:

- Pause message:

Press the [PLAY ►] key to pause the playing message. If the pause time exceeds 8 seconds, the pause operation will be aborted. The unit will continue message playback from the pause state, press the [PLAY ►] key again to continue message playback.

- Skip message:

To skip to the next message, press the [FORWARD ►►] key.

- Repeat message:

To repeat the current message press the [REPEAT ◀◀] key once. To listen to the previous message, press the [REPEAT ◀◀] key twice.


- Stop message:

Press the [STOP ■] key to abort the message play.

OPERATION


ERASE OR SAVE MESSAGE


Deleting all messages:

1. Press and hold the [**DELETE** ] key until **ES** (ERASE ALL) is displayed and blinked.
2. Select the desired mailbox key, all the message in that mailbox will be erased after a long beep.


Note:

Press [**PLAY** ] key to select mailbox 0

Press [**MAILBOX 1** ] key to select mailbox 1

Press [**MAILBOX 2** ] key to select mailbox 2

Deleting single messages:

Press the [**DELETE** ] key to erase the current playing message.

Saving messages:

The system saves your messages automatically. It can record approximately 54 min of messages (including the time for your announcements) or a maximum of 60 messages.

When the memory is full or 60 messages have been recorded, the LED will display "**Fu**". You must delete some or all of the messages before any new messages can be recorded.

CALL BREAKTHROUGH (CBT)

If you do not want to be disturbed, your system will answer the phone for you. However, if there is a particular call you would like to receive, inform the caller of the Caller Breakthrough function.

When the caller enters the CBT code from a touch tone telephone, the system beeps loudly to alert you to the priority call .

To use Call Breakthrough (CBT) a caller should:

1. Dial your telephone number.
2. When the announcement begins to play, enter "*" for one second to skip the OGM play, and then enter the CBT code, a two-

OPERATION

beep alarm tone will be heard if the code is correct.

3. The CBT function ends if it exceeds 45 seconds. It will then enter ICM recording in "ANSWER & RECORD" mode, or ends on-line operation in "ANSWER ONLY" mode or in "SYSTEM STANDBY" mode.
4. The corresponding touch tone commands are as follows:
End CBT functions press "#".

CBT CODE CHANGE

The CBT code is initially preset to "267". You can change the code to any 3 digits from 000 to 999. The procedure of CBT code setup / display is as follows:

1. Press the [**REPEAT** ◀◀] key for about 2 seconds and release to display CBT code.
The code display / setup will be high digit first, then middle digit, and then low digit.
2. Press the [**FORWARD** ▶▶] or the [**REPEAT** ◀◀] key to increase or decrease the digit.
3. Press the [**ANS**] key to select the correct digit.
4. Repeat step 2 and 3 to change following digit setup.
5. If a keypress exceeds 8 second, the setup / display procedure will be aborted.
6. Press the [**STOP** ■] key to quit the CBT code setup / display.

REMOTE CONTROL

YOUR REMOTE ACCESS CODE

You can use many features of the system when you are away from home. To protect your privacy, most features can only be used after you have entered a Remote Access Code from a touch tone telephone. The code is initially preset to "159". You can use the preset code or choose any 3 digit from 000 to 999.

Remote voice menu: After the corrected remote code is entered, the unit will play a voice help menu.

HELP MENU

To record outgoing message one, press STAR ONE.

To record outgoing message two, press STAR TWO.

To monitor room, press STAR THREE.

To play all messages of the mailbox press five, and then press the MAILBOX NUMBER.

To play all new messages of the mailbox press six, and then press the MAILBOX NUMBER.

To delete all messages of the mailbox press star seven, and then press the MAILBOX NUMBER.

To stop functions, press EIGHT.

To play the message played menu, press ZERO.

"enter the "0", the message played menu will be announced"

To repeat message, press FOUR.

To skip message, press SIX.

To delete message, press SEVEN.

To stop play, press EIGHT.

REMOTE CONTROL

CHANGE THE REMOTE ACCESS CODE

The procedure for remote access code setup / display is as follows:

1. Press the [**FORWARD ►►**] key for about 2 seconds and then release it to display the remote access code. The code display / setup will be a high digit first, then a middle digit, and then a low digit.
2. Press the [**FORWARD ►►**] key or the [**REPEAT ◀◀**] key to increase or decrease the digit.
3. Press the [**ANS**] key to select the correct digit.
4. If a keypress exceeds 8 seconds, the setup / display procedure will be aborted.

Please note:

If the AC power fails and there is no battery installed or the battery is low on power, the remote access code will return to the factory setting "159".

CHANGE YOUR REMOTE ACCESS CODE REMOTELY

If you have left home, you can change the remote access code as follows:

1. Dial your telephone number from a touch tone telephone.
2. When the system answers, you must press and hold [*****] for 1 second to skip the OGM play, a beep tone will be heard.
3. Press the **security code** to enter the remote control mode.
4. Enter [***6**] and then the new **security code**.
5. If a valid code number is entered, the system changes the remote access code.

REMOTE CONTROL

ROOM MONITOR

If you have left home, you can monitor the room state on the telephone line by using the following steps:

1. Dial your telephone number from a touch tone telephone.
2. When the system answers, you must press and hold "*" for 1 second to skip the OGM, a beep tone will be heard.
3. Press the security code to enter the remote control mode.
4. Enter "*3" to start room monitor.
5. The duration of room monitor state is set to 15 seconds .

CHANGING YOUR ANNOUNCEMENT

To change your announcement:

1. Dial your telephone number from a touch tone telephone.
2. When the system answers, you must press and hold "*" for 1 second to skip the OGM, a beep tone will be heard.
3. Press the **security code** to enter the "REMOTE CONTROL" mode.
4. Press "*1" to change OGM. The system beeps and begins recording.
5. Speak into the telephone in a normal tone of voice.
6. When you have finished, press "8" to stop or press "#" to quit the remote control function.

The system will beep and play your new announcement. To listen to your announcement again, press "1" once after the **security code**.

REMOTE CONTROL

RECORDING THE ANNOUNCEMENT 2 (OGM2)

To record the announcement 2 (ANSWER ONLY):

1. Dial your telephone number from a touch tone telephone.
2. When the system answers, you must press and hold "*" for 1 second to skip the OGM, a beep tone will be heard.
3. Press the **security code** to enter the "REMOTE CONTROL" mode.
4. Press "*2" to record OGM2. The system beeps and begins recording.
5. Speak into the telephone in a normal tone of voice.
6. When you have finished, press "8" to stop or press "#" to quit the remote control function.

The system will beep and play your new announcement. To listen to your announcement again, press "2" once after the **security code**.

REMOTE CONTROL

PLAYING YOUR MESSAGE

In order to reserve free memory for new messages, you may listen to the Incoming Messages (ICM) and delete insignificant ones as follows:

1. Dial your telephone number from a touch tone telephone.
2. When the system answers, you must press and hold "*" to skip the OGM, a beep tone will be heard.
3. Press the **security code** to enter the "REMOTE CONTROL" mode.
4. Press "5" to play all messages, then press "0" to play all message in mailbox 0, or press "1" to play all messages in mailbox 1, or press "2" to play all messages in mailbox 2.
5. Press "6" to play new messages, then press "0" for mailbox 0, press "1" for mailbox 1, press "2" for mailbox 2.

The following options are available while you are playing your messages:

- **Repeat message:**

To repeat an entire message, press key "4" to skip while the message is playing. To repeat the previous message, press key "4" while Date/Time Stamp (DTS) is playing.

- **Pause message:**

Enter key "5" to pause message play.

- **Skip message:**

Enter key "6" to skip message play.

- **Stop message:**

Enter key "8" to stop message play.

- **Deleting all messages:**

Enter "7" to erase all listened messages, then press "0" to erase mailbox 0, press "1" to erase mailbox 1, press 2 to erase mailbox 2.

- **Deleting single messages:**

To delete only a selected message, press "7" while the message is playing. To be sure you

REMOTE CONTROL

are deleting the right message, you can press "4" to repeat the message and then press "7" when you are sure that the system is playing the message you want to delete.

RECORDING A MEMO

After you have listened to your messages, you can record a memo for any member of the household.

1. Press "3", then press "0" for mailbox 0, press "1" for mailbox 1, press "2" for mailbox 2.
2. Begin speaking after the beep.
3. Press "8" when you are finished press "#" to quit remote control.

The memo is counted as a new message.

TURNING ON THE SYSTEM

If you forget to turn the system on before leaving home, you can turn it on by calling from a touch tone telephone as follows:

1. Dial your telephone number and wait for 8 rings.
2. The system answers and a two-beep tone will be heard.
3. Enter the **security code** to enter "REMOTE CONTROL" mode.
4. Press "*8" to set the unit to "ANSWER ONLY" mode or "*9" for "ANSWER & RECORD" mode.
5. The system will hang up the telephone line if a remote key entered exceeds 8 seconds.

REMOTE CONTROL

TURNING OFF THE SYSTEM

Use the following procedure to turn off the system:

1. Dial your telephone number from a touch tone telephone.
2. When the system answers, you must press and hold "*" for 1 second to skip the OGM, a beep tone will be heard.
3. Press the **security code** to enter the "REMOTE CONTROL" mode.
4. Enter "9" to turn off the system.
5. The system will hang up the telephone line if a remote key entered exceeds 8 seconds.

REFERENCE

WHEN MEMORY IS FULL

The system can record approximately 54 minutes of messages (including the time for your announcements) or a maximum of 60 messages. When memory is full or 60 messages have been recorded, message window displays "**Fu**". To make room for new messages, listen to your messages and delete some or all of them (see page 16).

When memory is full, the system will change to "ANSWER ONLY" mode automatically.

MALFUNCTION

Make sure you have followed all of the instructions in this manual. If the system does not work properly, remove the battery and replug the power transformer. The system should reset and delete your announcement and message. Your system should be ready to answer calls and record messages after you have recorded a new announcement and set the DTS (see page 9/10).

REPLACING THE BATTERIES

If the battery used for backup power is missing, low on power, or incorrectly installed, the message window displays "**Lo**". To prevent the loss of messages in the event of a power failure, install new battery immediately. For best performance, use heavy duty or alkaline battery.

If new heavy duty or alkaline batteries are installed, your announcement and messages are retained in memory for at least 50 hours during a power failure.

Note: To avoid losing your announcements or messages stored in memory, you should leave the unit connected to the AC power while changing the batteries. You should, however, disconnect the telephone line cord before changing the battery.

REFERENCE

TABLE 1: MESSAGE WINDOW

Message Windows	State	Page	What it means
0	On	13	No message has been received
1-60	On	16	Number of current message count
A1	On	13	ANSWER & RECORD mode (OGM1)
A2/Ao	On	13	ANSWER ONLY mode (OGM2)
CL	On/Blinking	9	Time played / Time setup is needed
--	On/Blinking	14	Answer incoming call / CBT mode
Lo	On	7	Battery low
Fu	Blinking	16	Memory or counter is full
ES	On/Blinking	16	Erase all messages
oo	On/Blinking	12	Memo message record / play
2A	On/Blinking	12	Two-way recording
≡	On/Blinking	17/18	Display / Setup high digit of code
==	On/Blinking	17/18	Display / Setup middle digit of code
—	On/Blinking	17/18	Display / Setup low digit of code

TABLE 2:
REMOTE CONTROL
COMMAND

Key(s)	Function
1	Play OGM 1
2	Play OGM 2
3	Record a memo in a mailbox, then press 0 for mailbox 0, 1 for mailbox 1 and 2 for mailbox 2

REFERENCE

4	Repeat
5	Play all message, then press 0 for mailbox 0, 1 for mailbox 1 and 2 for mailbox 2
5	Pause
6	Forward
6	Play new message, then press 0 for mailbox 0, 1 for mailbox 1 and 2 for mailbox 2
7	Erase individual message
7	Erase all message, then press 0 for mailbox 0, 1 for mailbox 1 and 2 for mailbox 2
8	Stop
9	Set the system to ANS. OFF mode
0	Play message played menu
#	Quit remote control operation

Key(s)	Function
*1	Recording ANS1
*1	Recording ANS1
*3	Room monitor
*4	Change CBT code
*6	Change security code
*8	Set to ANSWER ONLY mode
*9	Set to ANSWER & RECORD mode

TECHNICAL SPECIFICATIONS

Model	: DELTA 1010 digital telephone answering machine
Supported connections	: public telephone network or PBX with exchange line access
Power supply	: power transformer 220 – 240 V AC, 50 Hz : device 9.0 V DC
Power consumption	: device max. 0,3 A
Recording time	: messages (incl. announcement and memos) max 54 min max. 120 sec (each message) : memos max. 120 sec (each memo)
Operating temperature	: 0°C to +40°C
Storage temperature	: -20°C bis +60°C
Dimensions	: h approx. 50 mm : w approx. 132 mm : d approx. 133 mm
Weight without battery	: approx. 295 g

WARRANTY

This product is under warranty for 24 months from the date of purchase. Defects which are obviously due to the material or workmanship will be repaired free of charge during this period. This warranty will not be honoured if the product has been mishandled, e.g., dropped or pushed hard, or tampered with or altered by anyone other than the manufacturer.

If you have a warranty claim, please call the service number on the rear cover page. Please have the following handy:

- 1) a brief description of the difficulties encountered
- 2) proof of purchase.

CE 0197 X

GARANTIE

Bei Garantie-Inanspruchnahme wenden Sie sich bitte an die unten stehende Telefonnummer.

WARRANTY

If your product is defective, please call the phone number at the bottom of this page.

Service in Deutschland:

Hotline 0180 / 532 37 49

Service for Germany:

Hotline 0180 / 532 37 49