

SERVICE MANUAL


LE-3 CHASSIS

<u>MODEL</u>	<u>COMMANDER</u>	<u>DEST.</u>	<u>CHASSIS NO.</u>
<i>KF-50SX100</i>	<i>RM-903</i>	<i>AEP</i>	<i>SCC-P59A-A</i>
<i>KF-50SX100K</i>	<i>RM-903</i>	<i>OIRT</i>	<i>SCC-P60A-A</i>
<i>KF-50SX100U</i>	<i>RM-903</i>	<i>UK</i>	<i>SCC-P61A-A</i>

<u>MODEL</u>	<u>COMMANDER</u>	<u>DEST.</u>	<u>CHASSIS NO.</u>
--------------	------------------	--------------	--------------------



RM-903

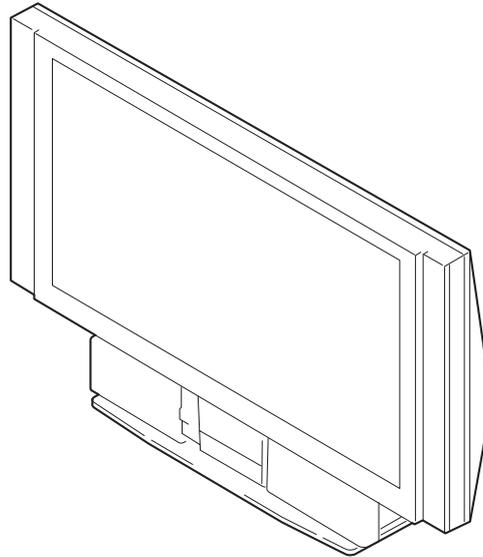


KF-50SX100/50SX100K/50SX100U

* Please file according to model size.

ELECTRICAL ADJUSTMENTS

3-1. ADJUSTMENTS WITH COMMANDER

Service adjustment to this model can be performed with the supplied remote commander RM-903.

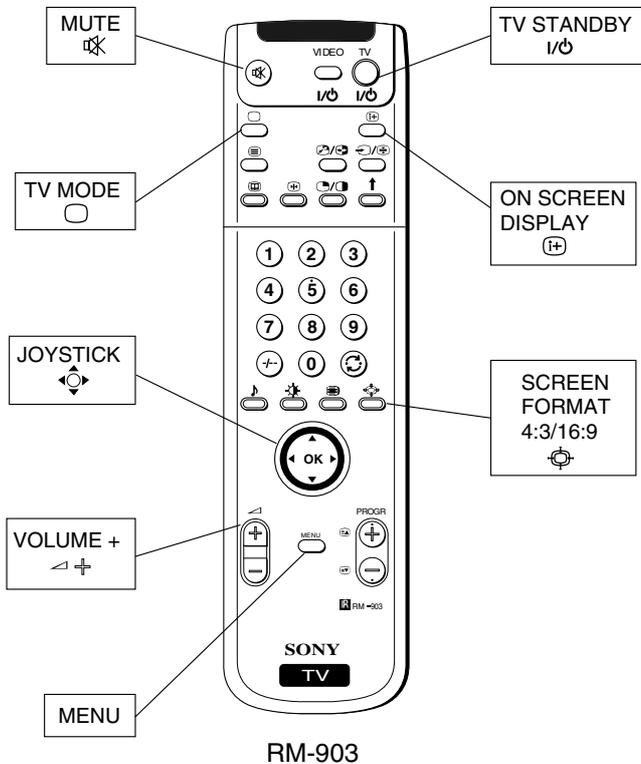

RM-903

1. Selection of Mode Between PAL and NTSC

 
PAL mode : Enter PAL signal with color burst.
NTSC mode: Enter NTSC signal with color burst. (VIDEO input only)

2. Selection of Screen Format

- 1) Press “ (BLUE)” button on the commander.
- 2) Press or key on the joystick to select screen format and press “ (OK)” button. At this time, normal screen comes back. (In the TT mode, the menu is switched to the Service menu.)

3-1-1. How to Enter TT Mode

1. Turn on the main power switch to place this set in standby mode. (LED will light in red.)
2. Press the buttons on commander as follows, and the TT mode will be selected.




“TT - -” will appear in the top right corner of the screen.
Other status information will also be displayed.

3. Press “ + ” on the commander. If “ (TV MODE)” button is pressed, the set exits from the TT mode and returns to normal TV mode.

3-1-2. How to Enter Service Menu

1. Select TT mode.
2. Press “MENU” button on the commander once, and normal menu screen will appear, or press it once more, and the following service menu screen will appear.

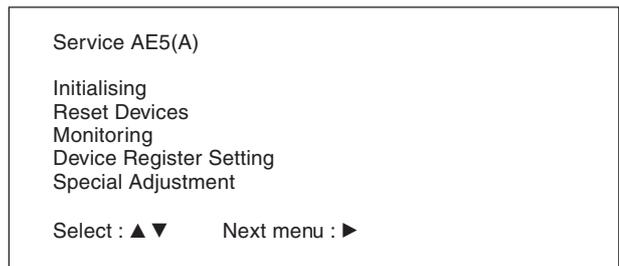

3. Following the screen, press or key on the joystick to select the desired item, and press key to enter the selected item.
4. Press or key on the joystick to change data of each item, and press “ (OK)” button to write changed data. (Except Projector Engine mode)
5. To return from each item, press key on the joystick. Or, to return to the TT mode, press the “MENU” button. (Except Projector Engine mode)

3-1-3. Screen Display for Service Menu

If each item of service menu is selected, the following screen is displayed.

• Initialising

