



# SERVICE MANUAL RA-4B CHASSIS


<u>MODEL</u>	<u>COMMANDER</u>	<u>DEST.</u>	<u>CHASSIS NO.</u>	<u>MODEL</u>	<u>COMMANDER</u>	<u>DEST.</u>	<u>CHASSIS NO.</u>
KP-53HS10	RM-Y902	US	SCC-P40A-A				
KP-53HS10	RM-Y902	Canadian	SCC-P40A-A				
KP-61HS10	RM-Y902	US	SCC-P40B-A				
KP-61HS10	RM-Y902	Canadian	SCC-P40B-A				

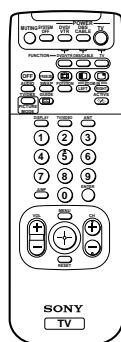

RM-Y902

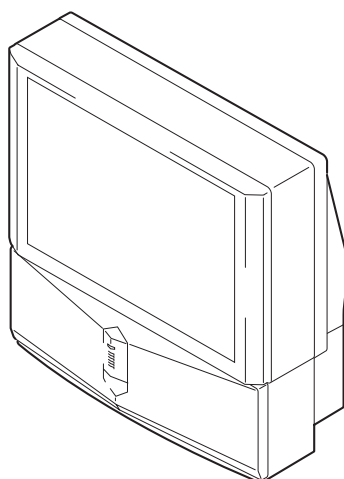

KP-53HS10

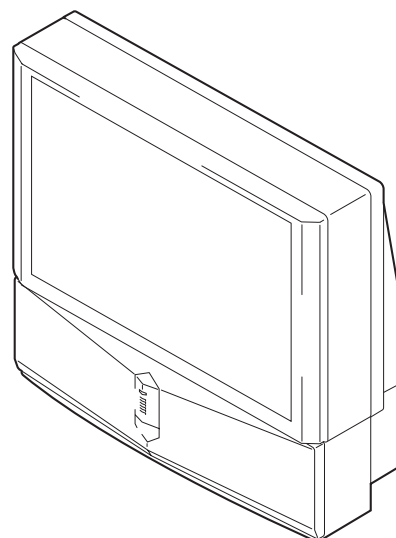

KP-61HS10

\* Please file according to model size. .... ☐

53 61

COLOR REAR VIDEO PROJECTOR  
**SONY**<sup>®</sup>

### 3-9. ELECTRICAL ADJUSTMENT BY REMOTE COMMANDER

By using Remote Commander (RM-Y902), all circuit adjustments can be made.

#### NOTE : Test Equipment Required.


1. Pattern Generator (with component outputs)
2. Frequency counter
3. Digital multimeter
4. Audio oscillator

#### 1. METHOD OF SETTING THE SERVICE ADJUSTMENT MODE

##### SERVICE MODE PROCEDURE


1. Standby mode. (Power off)
2. **DISPLAY** → **5** → **VOL (+)** → **TV POWER** on the Remote Commander.  
(Press each button within a second.)

##### SERVICE MODE ADJUSTMENT

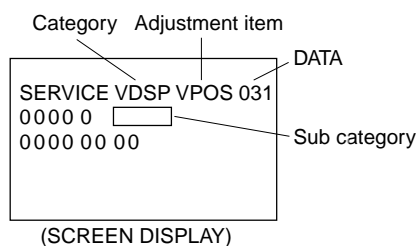

3. The SCREEN displays the item being adjusted.
4. Press **1** or **4** on the Remote Commander to select the adjustment item.
5. Press **3** or **6** on the Remote Commander to change the data.
6. Press **2** or **5** on the Remote Commander to select the category.

Every time you press 2(Category up), Service mode changes in the order as shown below.

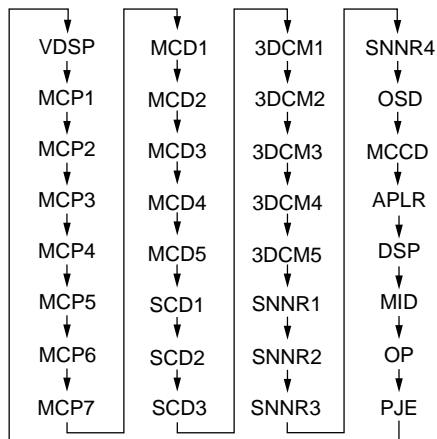

7. If you want to recover the latest values press **0** then **ENTER** to read the memory.

8. Press **MUTING** then **ENTER** to write into memory.


9. Turn power off.

Note: Press **8** then **ENTER** on the Remote Commander to initialize or turn set off and on to exit.

#### 2. MEMORY WRITE CONFIRMATION METHOD

1. After adjustment, remove the plug from AC outlet, and then replace the plug in AC outlet again.
2. Turn the power switch ON and set to Service Mode.
3. Call the adjusted items again and confirm they were adjusted.

#### 3. ADJUSTING BUTTONS AND INDICATOR

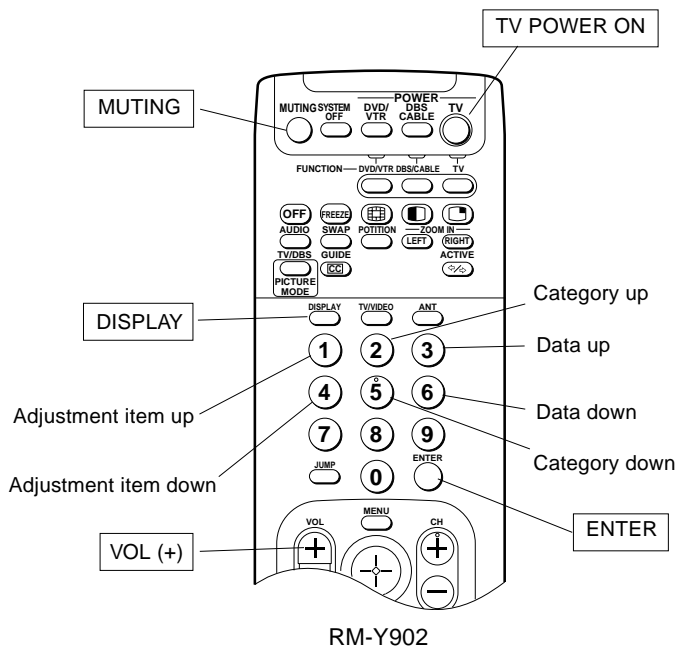

RM-Y902

Note : When the PJE mode is activated, which displays an internally generated signal, several buttons on the remote commander will have different functions than listed above. Therefore, when in the PJE mode, refer to page 49 for button functions.