


RG-2 CHASSIS

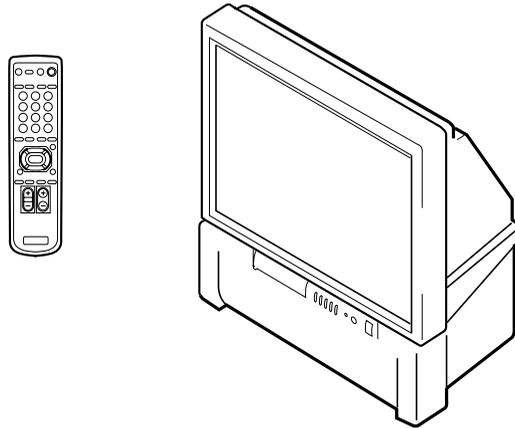

SONY

SECTION 5 CIRCUIT ADJUSTMENTS

5-1. ADJUSTMENTS WITH COMMANDER

Service adjustments are made with the RM-871 that comes with this unit.

Entering service mode

With the unit on standby

↓

[i+]

↓

[5]

↓

[△]

↓

[⏻]

The operation sequence puts the unit into service mode.

[1], [4] Select the adjustment item.

↓

[3], [6] Raise/lower the data value.

↓

[MUTING] Writes.


↓

[0] Executes the writing.

- [7], [0] All the data becomes the values in memory.
- [8], [0] All user control goes to the standard state.
- [5], [0] Service data initialization (Be sure not to use usually.)
- [i+], [0] Write 50Hz adjustment data to 60Hz, or vice versa. (not to use [2], [0].)

The screen display is :

Item number	DATA	Mode	
00	VSH	1F	SERVICE 50 ← Depends on the signals
XXX	V2	1C	00 00 00 20 ← PAL, SECAM : 50
	SOFTWARE VERSION		
OEM CODE		H SYNC COUNTER	NTSC : 60

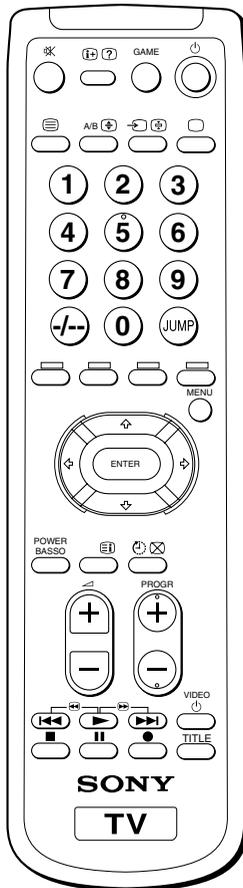

RM-967