


How do I install TP-LINK wireless adapter manually in Windows XP

Before the installation, please make sure the adapter is connected to the computer and is detected by the system.


1. Open **Start** Menu, and click **Run...**



2. Input "devmgmt.msc" and click **OK**.

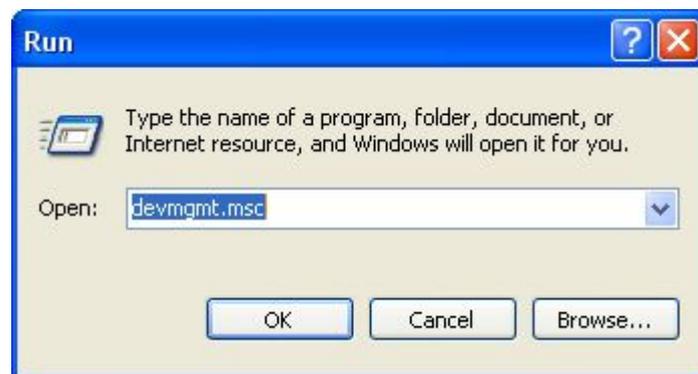


3. Find the new detected hardware, right click it and then click **Update Driver...**

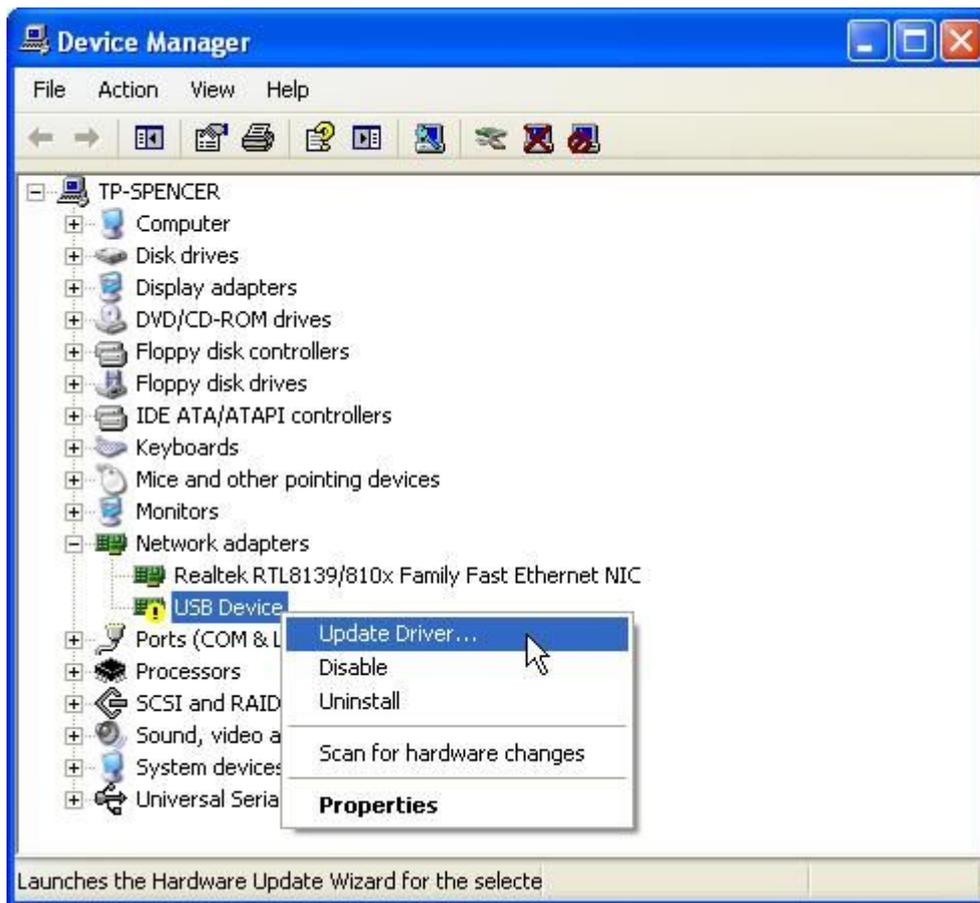


4. Select **No, not this time**.




5. Select *Install from a list or specific location (Advanced)*.

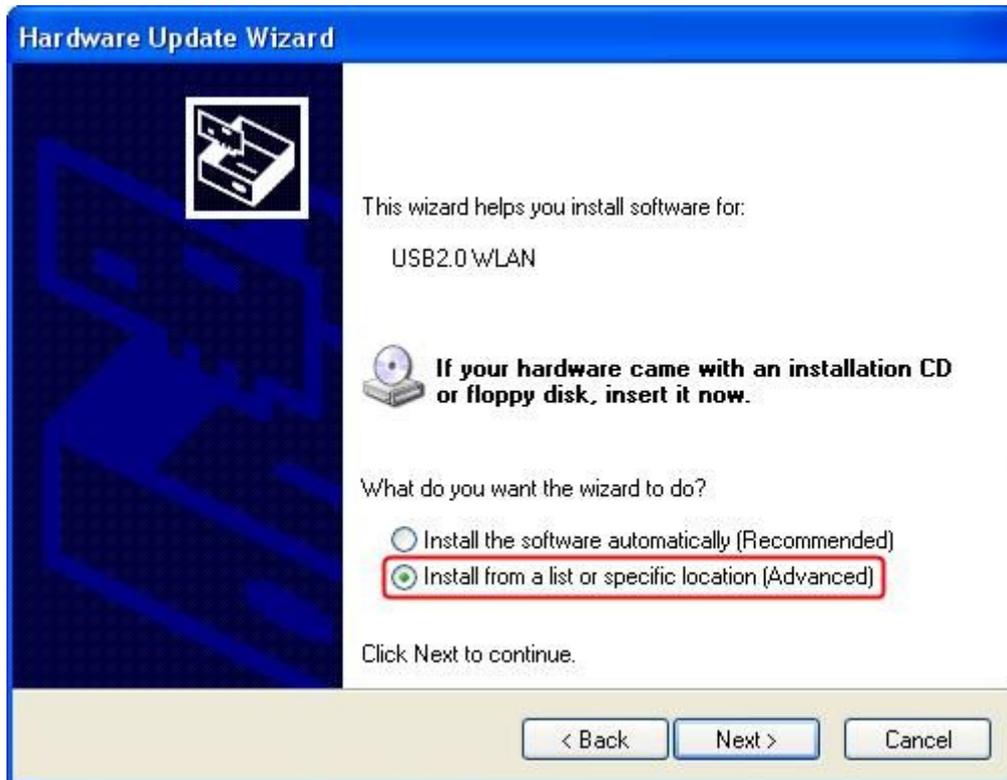

6. Select *Don't search. I will choose the driver to install.*

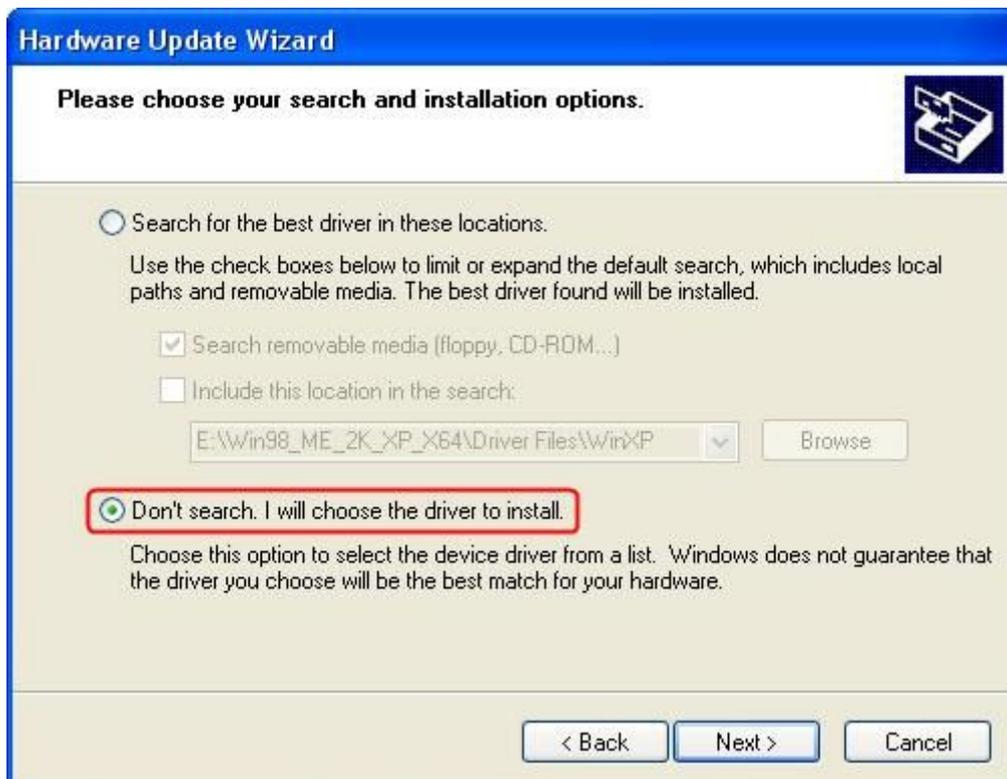


7. Select **Show All Devices**.

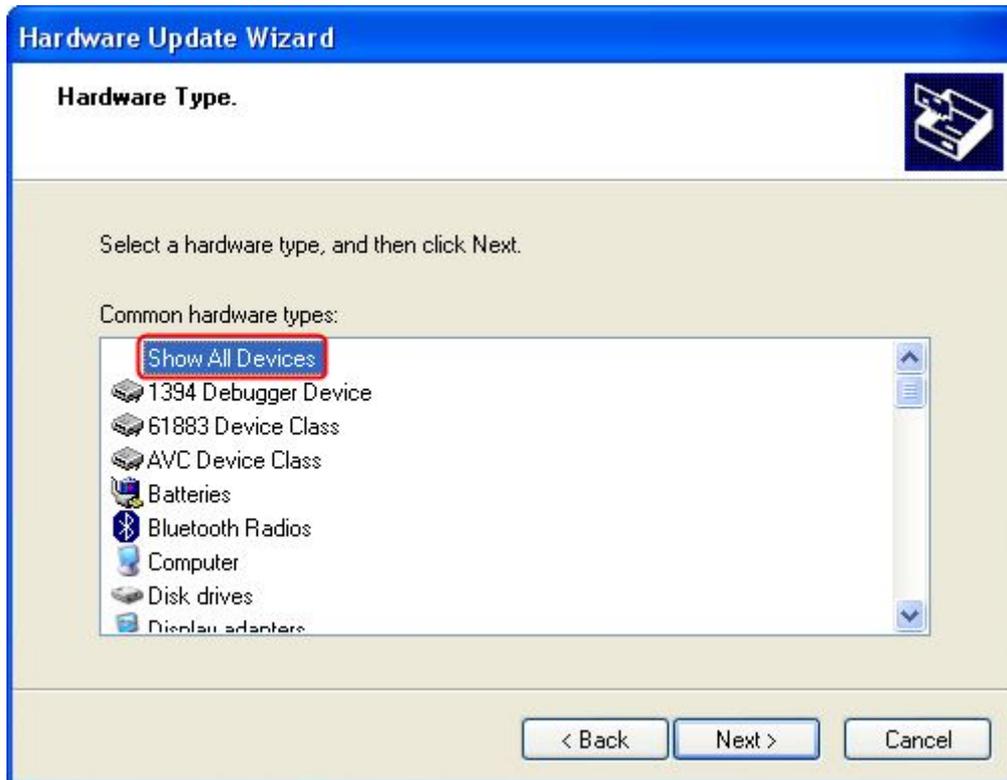


8. Click **Have Disk**.



8. Click **Browse...**

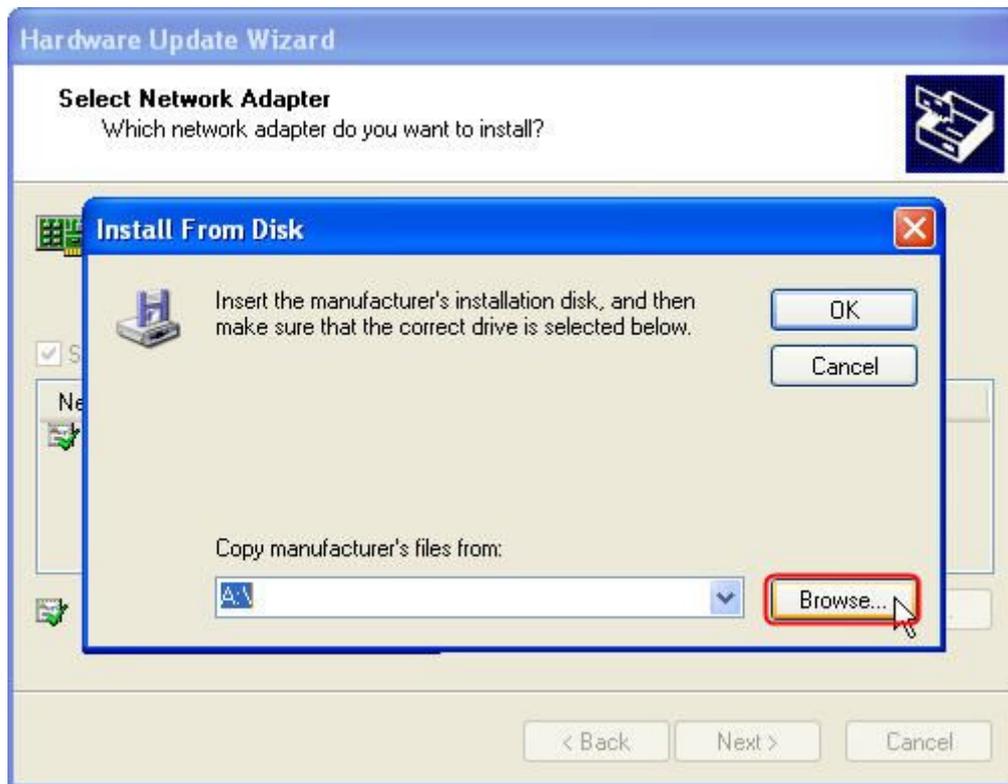

9. Point to the inf file in the driver folder, and then click **Open**.

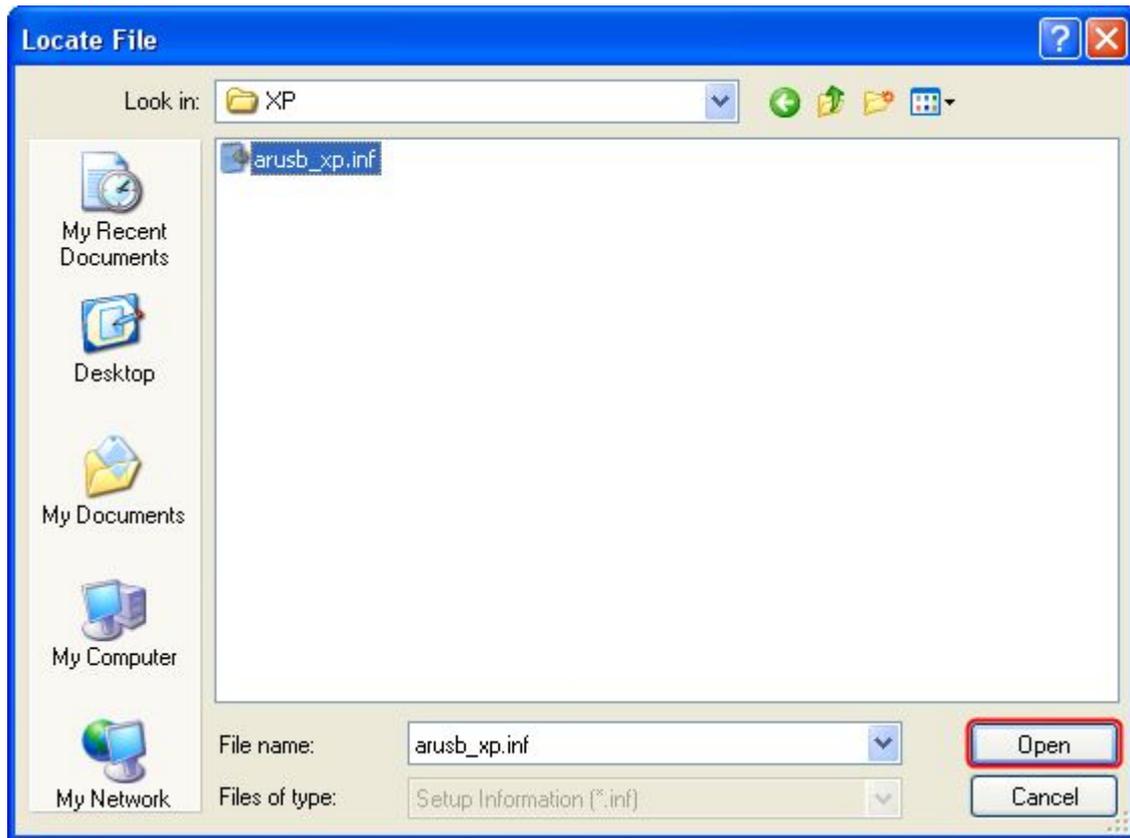

10. Click **Next**.




11. Click **Continue Anyway**.



12. Click **Finish**.



As yet, the adapter has been successfully installed. You can go to **Device Manager** and check **Network Adapters**.

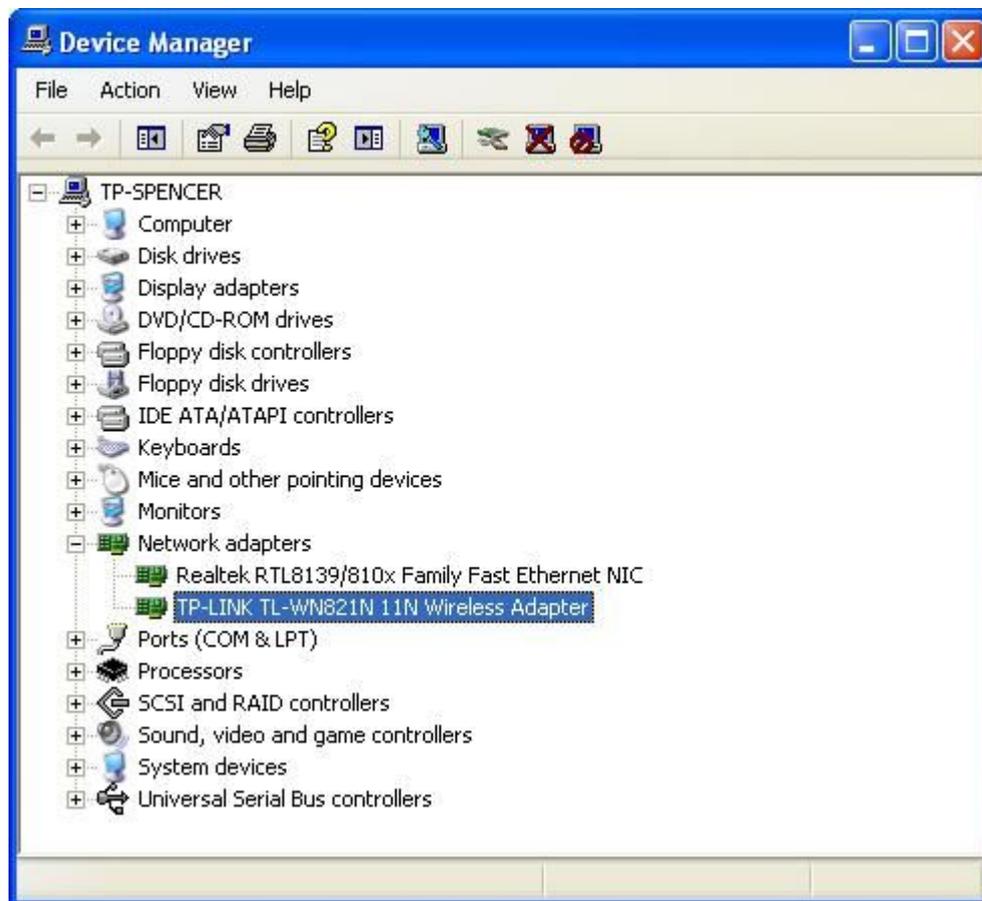

If there are any further problems, please visit our [FAQ](#) page or contact [TP-LINK support](#).